



# xPico® 110

## Wired Device Server Module

### User Guide

---

## Intellectual Property

© 2017 Lantronix. All rights reserved. No part of the contents of this publication may be transmitted or reproduced in any form or by any means without the written permission of Lantronix.

*Lantronix* and *xPico* are registered trademarks, and *DeviceInstaller* is a trademark of Lantronix in the United States and other countries. *DeviceInstaller* is a trademark of Lantronix, Inc.

Patented: <http://patents.lantronix.com>; additional patents pending.

*Ethernet* is a trademark of XEROX Corporation. *UNIX* is a registered trademark of the Open Group. *Windows* is a trademark of Microsoft Corp.

## Warranty

For details on the Lantronix warranty policy, please go to our Web site at [www.lantronix.com/support/warranty](http://www.lantronix.com/support/warranty).

## Contacts

### Lantronix Corporate Headquarters

7535 Irvine Center Drive  
Suite 100  
Irvine, CA 92618, USA

Toll Free: 800-526-8766  
Phone: 949-453-3990  
Fax: 949-453-3995

### Technical Support

Online: [www.lantronix.com/support](http://www.lantronix.com/support)

### Sales Offices

For a current list of our domestic and international sales offices, go to the Lantronix web site at [www.lantronix.com/about/contact](http://www.lantronix.com/about/contact)

## Disclaimer

Operation of this equipment in a residential area is likely to cause interference, in which case the user, at his or her own expense, will be required to take whatever measures may be required to correct the interference.

**Note:** *This product has been designed to comply with the limits for a Class B digital device pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with this guide, may cause harmful interference to radio communications.*

Changes or modifications to this device not explicitly approved by Lantronix will void the user's authority to operate this device.

**Note:** *With the purchase of xPico 110 wired device server module, the OEM agrees to an OEM firmware license agreement that grants the OEM a non-exclusive, royalty-free firmware license to use and distribute the binary firmware image provided, only to the extent necessary to use the xPico hardware. For further details, please see the xPico OEM firmware license agreement.*

## Revision History

Date	Rev.	Comments
March 2017	A	Initial release for firmware version 6.11.0.5.
December 2017	B	Updated enhanced password information.

For the latest revision of this product document, please check our online documentation at [www.lantronix.com/support/documentation](http://www.lantronix.com/support/documentation).

## Table of Contents

Intellectual Property _____	2
Warranty _____	2
Contacts _____	2
Disclaimer _____	2
Revision History _____	3
List of Tables _____	8
List of Figures _____	9
<b>1. Using This Guide</b>	<b>10</b>
Purpose and Audience _____	10
Chapter Summary _____	10
Additional Documentation _____	11
<b>2. Introduction</b>	<b>12</b>
Capabilities _____	12
Applications _____	12
Protocol Support _____	13
Configuration Methods _____	13
Addresses and Port Numbers _____	13
Hardware Address _____	13
IP Address _____	14
Port Numbers _____	14
Product Information Label _____	14
<b>3. Using DeviceInstaller</b>	<b>15</b>
Installing DeviceInstaller _____	15
Assigning an IP Address _____	15
Accessing the xPico 110 Wired Device Server Module Using DeviceInstaller _____	16
Viewing the Current Configuration _____	16
<b>4. Configuration Using Web Manager</b>	<b>19</b>
Accessing Web Manager Using DeviceInstaller _____	19
Network Configuration _____	21

Network Mode _____	21
Automatic IP Address Configuration _____	21
Static IP Address Configuration _____	22
Ethernet Configuration _____	23
Server Configuration _____	24
Server Configuration _____	24
Advanced _____	25
Host List Configuration _____	25
Retry Settings _____	26
Host Information _____	26
Channel 1 and 2 Configuration _____	27
Serial Settings _____	27
Connection Settings - TCP _____	30
Connection Settings - UDP _____	33
Configurable Pin Settings _____	34
Configurable Pin Functions _____	35
Apply Settings _____	35
Apply Defaults _____	35
<b>5. Configuration via Telnet or Serial Port (Setup Mode)</b>	<b>37</b>
Accessing Setup Mode _____	37
Telnet Connection _____	37
Serial Port Connection _____	39
Exiting Setup Mode _____	39
<b>6. Setup Mode: Server Configuration</b>	<b>40</b>
Server Configuration (Option 0) _____	40
IP Address _____	40
Set Gateway IP Address _____	41
Netmask: Number of Bits for Host Part _____	41
Set DNS Server IP Address _____	41
Change Telnet/Web Manager Password _____	42
DHCP Name _____	42
<b>7. Setup Mode: Channel Configuration</b>	<b>43</b>
Channel 1 (Option 1) or Channel 2 (Option 2) _____	43

Baudrate _____	43
I/F (Interface) Mode _____	44
Flow _____	44
Port Number _____	45
Connect Mode _____	45
a) Incoming Connection _____	46
b) Response _____	47
c) Active Startup _____	47
d) Datagram Type _____	50
e) Modem Mode _____	50
Send the Escape Sequence (+++) in Modem Mode _____	53
Show IP addr after 'RING' _____	53
Auto Increment Source Port _____	53
Remote IP Address _____	53
Remote Port _____	53
DisConnMode _____	54
Flush Mode (Buffer Flushing) _____	55
Pack Control _____	55
Packing Interval _____	56
Trailing Characters _____	56
Send Characters _____	56
DisConnTime (Inactivity Timeout) _____	57
Send Characters _____	57
Telnet Terminal Type _____	57
Channel (Port) Password _____	57

## **8. Setup Mode: Advanced Settings 58**

Expert Settings (Option 5) _____	58
TCP Keepalive time in seconds _____	59
ARP Cache timeout in seconds _____	59
CPU Performance _____	59
Disable Monitor Mode at bootup _____	59
HTTP Port Number _____	59
MTU Size _____	60
TCP Re-Transmission Timeout _____	60
Enable alternate MAC _____	60
Ethernet Connection Type _____	60

Security Settings (Option 6)	60
Disable SNMP	61
SNMP Community Name	61
Disable Telnet Setup	61
Disable TFTP Firmware Upgrade	61
Disable Port 77FE (Hex)	62
77FEh Access Mode	62
Disable Web Server	62
Disable Web Setup	62
Disable ECHO Ports	62
Enable Encryption	63
Enable Enhanced Password	64
Disable Port 77F0 (Hex)	64
Default Settings (Option 7)	64
Channel 1 and Channel 2 Configuration Defaults	64
Expert Settings Defaults	65
Security Settings Defaults	65
<b>9. GPIO Interface</b>	<b>66</b>
Configurable Pins	66
Features	66
Control Protocol	67
Guidelines	67
Commands	67
Examples	70
<b>10. Firmware Upgrades</b>	<b>71</b>
Obtaining Firmware	71
Reloading Firmware	71
Using TFTP: Graphical User Interface	71
Using TFTP: Command Line Interface	72
Recovering the Firmware Using the Serial Port and DeviceInstaller	73
<b>11. Monitor Mode</b>	<b>74</b>
Entering Monitor Mode Using the Serial Port	74
Entering Monitor Mode Using the Network Port	74

Monitor Mode Commands _____	74
<b>12. Troubleshooting</b>	<b>77</b>
Problems and Error Messages _____	77
<b>A: Technical Support</b>	<b>80</b>
<b>B: Binary to Hexadecimal Conversions</b>	<b>81</b>
Converting Binary to Hexadecimal _____	81
Conversion Table _____	81
Scientific Calculator _____	81
<b>C: Compliance</b>	<b>83</b>
RoHS, REACH and WEEE Compliance Statement _____	83

## List of Tables

Table 6-1. BootP/DHCP/AutoIP Options _____	40
Table 6-2. Standard IP Network Netmasks _____	41
Table 7-1. Interface Mode Options _____	44
Table 7-2. RS232 Interface Mode Settings _____	44
Table 7-3. Flow Control Options _____	45
Table 7-4. Reserved Port Numbers _____	45
Table 7-5. Connect Mode Options _____	46
Table 7-6. Manual Connection Address Example _____	48
Table 7-7. Modem Mode Messages _____	51
Table 7-8. Modem Mode Commands _____	52
Table 7-9. Disconnect Mode Options _____	54
Table 7-10. Flush Mode Options _____	55
Table 7-11. Pack Control Options _____	56
Table 10-1. Firmware Files _____	71
Table 11-1. Monitor Mode Commands _____	75
Table 11-2. Command Response Codes _____	76

---

## List of Figures

Figure 2-1. Product Label _____	14
Figure 4-1. Web Manager Login Window _____	20
Figure 4-2. Lantronix Web Manager _____	20
Figure 4-3. Network Settings _____	21
Figure 4-4. Server Settings _____	24
Figure 4-5. Hostlist Settings _____	26
Figure 4-6. Channel Serial Settings _____	27
Figure 4-7. TCP Connection Settings _____	30
Figure 4-8. UDP Connection Settings _____	33
Figure 4-9. Configurable Pins Settings _____	34
Figure 4-10. Apply Settings and Apply Defaults _____	36
Figure 5-1. xPico 110 Address _____	38
Figure 5-2. Setup Menu Options _____	38
Figure 7-1. Serial Port Parameters _____	43
Figure 7-2. Hostlist Option _____	49
Figure 8-1. Expert Settings _____	58
Figure 8-2. Security Settings _____	60
Figure 10-1. TFTP Window _____	72

# 1. Using This Guide

## Purpose and Audience

This guide covers the xPico® 110 wired device server module. It provides the information needed to configure, use, and update the xPico 110 firmware and is intended for OEMs and system integrators who are embedding the xPico 110 wired device server module in their product designs.

## Chapter Summary

Document	Description
<a href="#">2: Introduction</a>	Describes the main features of the xPico 110 wired device server module and the protocols it supports.
<a href="#">3: Using DeviceInstaller</a>	Provides information for getting your unit up and running, using DeviceInstaller to assign an IP address.
<a href="#">4: Configuration Using Web Manager</a>	Details using the Web Manager to set parameters such as port and server properties.
<a href="#">5: Configuration via Telnet or Serial Port (Setup Mode)</a>	Provides instructions for accessing Setup Mode (command line interface) using a Telnet connection through the network or a terminal or terminal emulation program through the serial port.
<a href="#">6: Setup Mode: Server Configuration</a>	Details the network (server) settings.
<a href="#">7: Setup Mode: Channel Configuration</a>	Details the serial port settings.
<a href="#">8: Setup Mode: Advanced Settings</a>	Details expert and security settings and explains how to reset the unit to factory default values.
<a href="#">9: GPIO Interface</a>	Provides instructions for configuring the 8 General Purpose I/O pins (CP1-8).
<a href="#">10: Firmware Upgrades</a>	Provides instructions for obtaining the latest firmware and updating the xPico 110 wired device server module.
<a href="#">11: Monitor Mode</a>	Provides instructions for accessing and using the command line interface for monitoring the network and diagnosing problems.
<a href="#">12: Troubleshooting</a>	Describes common problems and error messages and how to contact Lantronix Technical Support.
<a href="#">A: Technical Support</a>	Provides contact information for Lantronix and other technical support options.
<a href="#">B: Binary to Hexadecimal Conversions</a>	Provides instructions for converting binary numbers to hexadecimal.
<a href="#">C: Compliance</a>	Provides compliance information.

## Additional Documentation

Visit the Lantronix Web site at [www.lantronix.com/support/documentation](http://www.lantronix.com/support/documentation) for the latest documentation and the following additional documentation.

<b>Document</b>	<b>Description</b>
<b><i>xPico 110 Wired Device Server Module Integration Guide</i></b>	Provides information about the xPico 110 hardware, testing the xPico 110 wired device server module using the evaluation board, and integrating the xPico 110 unit into your product.
<b><i>xPico 110 Evaluation Kit Quick Start</i></b>	Instructions for using the xPico 110 wired device server module on the xPico evaluation kit.
<b><i>xPico 110 Evaluation Kit User Guide</i></b>	Information needed to use the xPico 110 wired device server on the evaluation kit.
<b><i>Com Port Redirector User Guide</i></b>	Provides information on using the Windows® utility to create a virtual com port.
<b><i>DeviceInstaller Online Help</i></b>	Provides information on using DeviceInstaller™ application to configure IP addresses and locate Lantronix devices on the network.

## 2. Introduction

This chapter summarizes the xPico 110 wired device server module's features and the basic information needed to get started.

### Capabilities

The xPico 110 wired device server module has the following capabilities:

- ◆ Connects devices through a TCP data channel or through a Telnet connection to computers or to another device server. The xPico 110 wired device server module also supports UDP datagrams.
- ◆ Contains a web HTTP server allowing presentation of custom content and easy configuration through a browser.
- ◆ Has eight programmable I/O pins used to monitor or control attached devices.

### Applications

The xPico 110 wired device server module connects serial devices such as those listed below to Ethernet networks using the IP protocol family.

#### **Access Control and Physical Security**

- ◆ Door Access Controllers
- ◆ Biometric Readers
- ◆ Hand Readers
- ◆ Electronic Locks and Vaults

#### **Industrial Machines**

- ◆ Label Printers
- ◆ Print and Apply Solutions
- ◆ Barcode Printers
- ◆ Beverage Dispensers

#### **Building Automation**

- ◆ HVAC Systems
- ◆ Environmental Monitoring
- ◆ Infrastructure Monitoring

#### **Renewable Energy**

- ◆ EV Charging Piles
- ◆ EV Charging Stations
- ◆ Power Inverters

## Protocol Support

The xPico 110 wired device server module uses the Internet Protocol (IP) for network communications. It uses the Transmission Control Protocol (TCP) to assure that no data is lost or duplicated, and that everything sent to the connection arrives correctly at the target.

Supported protocols include:

- ◆ ARP, TCP/IP, UDP/IP, BOOTP, ICMP, Telnet, TFTP, AutoIP, DHCP, HTTP, and SNMP for network communications and management.
- ◆ TCP/IP, UDP/IP, and Telnet for connections to the serial port.
- ◆ TFTP for firmware and web page updates.
- ◆ IP for addressing, routing, and data block handling over the network.
- ◆ User Datagram Protocol (UDP) for typical datagram applications in which devices interact with other devices without maintaining a point-to-point connection.

## Configuration Methods

For the unit to operate correctly on a network, it must have a unique IP address on the network. There are three basic methods for logging into the device server to assign an IP address and configure the unit:

- ◆ **DeviceInstaller:** Assign an IP address and view the current xPico 110 configuration using a Graphical User Interface (GUI) on a PC attached to a network. See [3 Using DeviceInstaller](#).
- ◆ **Web Manager:** Through a web interface, configure the xPico 110 wired device server module and its settings using the xPico 110 unit's Web Manager. See [4 Configuration Using Web Manager](#).
- ◆ **Serial & Telnet Ports:** There are two approaches to accessing Serial Mode. Make a Telnet connection to the network port (9999) or connect a terminal (or a PC running a terminal emulation program) to the unit's serial port. See [5 Configuration via Telnet or Serial Port \(Setup Mode\)](#).

## Addresses and Port Numbers

### Hardware Address

The hardware address is also referred to as the Ethernet address or the MAC address. The first three bytes of the Ethernet address identify the unit as a Lantronix product. The fourth, fifth, and sixth bytes are unique numbers assigned to each unit.

**Example:** 00-80-A3-14-01-18

**Note:** Make note of the MAC address. It is needed to locate the xPico 110 wired device server module using the DeviceInstaller utility.

## IP Address

Every device connected to an IP network must have a unique IP address. This address is used to reference the specific unit. The xPico 110 wired device server module is automatically assigned an IP address on DHCP-enabled networks, as it is DHCP-enabled by default.

## Port Numbers

Every TCP connection and every UDP datagram is defined by a destination IP address and a port number. For example, a Telnet application commonly uses port number 23. A port number is similar to an extension on a phone system.

The unit's serial channel (port) can be associated with a specific TCP/UDP port number. Port number 9999 is reserved for access to the unit's Setup (configuration) Mode window. Ports 0-1024 are reserved as well. For more information on reserved port numbers, see to [Table 7-4. Reserved Port Numbers](#) on page 45.

## Product Information Label

The product information label on the unit contains the following information about the specific unit:

- ◆ Part Number
- ◆ Revision
- ◆ Manufacturing Date Code
- ◆ Product Model
- ◆ Country of Origin
- ◆ Lantronix Datamatrix Barcode
- ◆ MAC Address

Figure 2-1. Product Label



## 3. Using DeviceInstaller

This chapter covers the steps for getting the xPico 110 wired device server module online and viewing its current configuration.

**Note:** *DeviceInstaller* is a free utility program provided by Lantronix that discovers, configures, upgrades, and manages Lantronix Device Servers. It can be downloaded from the Lantronix website at [www.lantronix.com/support/downloads](http://www.lantronix.com/support/downloads).

For instructions on using *DeviceInstaller* to configure the IP address and related settings or for more advanced features, see the [DeviceInstaller Online Help](#).

### Installing DeviceInstaller

**To install DeviceInstaller:**

1. Download the latest version of DeviceInstaller from <http://www.lantronix.com/downloads>. The minimum required version that supports supporting xPico 110 is version 4.4.0.4.
2. Run the executable to start the installation process.
3. Respond to the installation wizard prompts. (If prompted to select an installation type, select **Typical**).

### Assigning an IP Address

The unit's IP address must be configured before it can work correctly on a network. You have several options for assigning an IP to your unit. We recommend that you manually assign the IP address over the network using DeviceInstaller.

**Note:** *To use a serial connection instead of an Ethernet connection to configure the device, see 5 Configuration via Telnet or Serial Port (Setup Mode) on page 39.*

The unit's IP address is normally set to 0.0.0.0 at the factory. The hardware address is on the product label. The unit is DHCP enabled as the default.

**To assign an IP address manually:**

1. Click **Start**→**All Programs** → **Lantronix**→**DeviceInstaller 4.4**→**DeviceInstaller**. If your PC has more than one network adapter, a message displays. Select an adapter and click **OK**.

**Note:** *If the unit already has an IP address (e.g., DHCP has assigned an IP address), click the **Search** icon and select the unit from the list of Lantronix device servers on the local network.*

2. Click the **Assign IP** icon  .
3. If prompted, enter the hardware address (on the product label) and click **Next**.

4. Select **Assign a specific IP address** and click **Next**.
  5. Enter the **IP address**. The **Subnet mask** displays automatically based on the IP address; if desired, you may change it. On a local network, you can leave the **Default gateway** blank (all zeros). Click **Next**.
  6. Click the **Assign** button and wait several seconds until a confirmation message displays. Click **Finish**.
  7. Select the device from the main window list and select **Ping** from the **Tools** menu. The Ping Device dialog box shows the IP address of the selected unit.
  8. From the **Tools** menu, click the **Ping** button. The results display in the Status window. Click the **Clear Status** button to clear the window so you can ping the device again.
- Note: If you do not receive "Reply" messages, make sure the unit is properly attached to the network and that the IP address assigned is valid for the particular network segment you are working with. If you are not sure, check with your systems administrator.*
9. Click the **Close** button to close the dialog box and return to the main window.

## Accessing the xPico 110 Wired Device Server Module Using DeviceInstaller

1. Click **Start**→**All Programs** → **Lantronix**→**DeviceInstaller 4.4**.
2. Click the **xPico** folder. The list of available Lantronix xPico modules display.
3. Expand the list of xPico 110 wired device server modules by clicking the **+** symbol next to the xPico icon. Select the xPico 110 unit by clicking on its IP address to view its configuration.

## Viewing the Current Configuration

DeviceInstaller provides a view of the unit's configuration.

### To view the unit's current settings:

1. Follow the instructions above to locate the xPico 110 wired device server module.
2. In the right pane, click the **Device Details** tab. The current xPico 110 configuration displays:

<b>Name</b>	Configurable field. A name that identifies the xPico 110 wired device server module.  Double-click the field, type in the value, and press <b>Enter</b> to complete. This name is not visible on other PCs or laptops using the DeviceInstaller utility.
-------------	--

<b>DHCP Device Name</b>	<p>Non-configurable field. Displays the name associated with xPico 110 wired device server module's current IP address, if the IP address was obtained dynamically.</p> <p>To change the DHCP device name, see <a href="#">Configuration Using Web Manager</a> or <a href="#">Configuration via Telnet or Serial Port (Setup Mode)</a>.</p>
<b>Group</b>	<p>Configurable field. A group name to categorize the xPico 110 wired device server module.</p> <p>Double-click the field, type in the value, and press <b>Enter</b> to complete. This group name is not visible on other PCs or laptops using DeviceInstaller.</p>
<b>Comments</b>	<p>Configurable field. Information about the xPico 110 wired device server module.</p> <p>Double-click the field, type in the value, and press <b>Enter</b> to complete. This description or comment is not visible on other PCs or laptops using DeviceInstaller.</p>
<b>Device Family</b>	<p>Non-configurable field. Displays the xPico 110 wired device server module's device family as "xPico."</p>
<b>Type</b>	<p>Non-configurable field. Displays the device type as "xPico 110."</p>
<b>ID</b>	<p>Non-configurable field. Displays the xPico 110 wired device server module's ID embedded within the unit.</p>
<b>Hardware Address</b>	<p>Non-configurable field. Displays the xPico 110 wired device server module's hardware (or MAC) address.</p>
<b>Firmware Version</b>	<p>Non-configurable field. Displays the firmware currently installed on the xPico 110 wired device server module.</p>
<b>Extended Firmware Version</b>	<p>Non-configurable field. Displays the full version nomenclature of the firmware.</p>
<b>Online Status</b>	<p>Non-configurable field. Displays the xPico 110 wired device server module's status as online, offline, unreachable (the xPico 110 unit is on a different subnet), or busy (the xPico 110 wired device server module is currently performing a task).</p>
<b>IP Address</b>	<p>Non-configurable field. Displays the xPico 110 wired device server module's current IP address. To change the IP address, see <a href="#">Assigning an IP Address</a> on page 15.</p>
<b>IP Address was Obtained</b>	<p>Displays "Dynamically" if the xPico 110 wired device server module automatically received an IP address (e.g., from DHCP). Displays "Statically" if the IP address was configured manually. If the IP address was assigned dynamically, the following fields appear:</p> <ul style="list-style-type: none"> <li>◆ Obtain via DHCP with value of True or False.</li> <li>◆ Obtain via BOOTP with value of True or False.</li> <li>◆ Obtain via RARP with value of True or False</li> <li>◆ Obtain via Auto IP with value of True or False</li> </ul>
<b>Subnet Mask</b>	<p>Non-configurable field. Displays the xPico 110 wired device server module's current subnet mask. To change the subnet mask, see <a href="#">Assigning an IP Address</a> on page 15.</p>

<b>Gateway</b>	Non-configurable field. Displays the xPico 110 wired device server module's current gateway. To change the gateway, see <a href="#">Assigning an IP Address</a> on page 15.
<b>Number of COB partitions supported</b>	Non-configurable field. Displays the number of COB partitions supported.
<b>Number of Ports</b>	Non-configurable field. Displays the number of ports on the xPico 110 wired device server module.
<b>TCP Keepalive</b>	Non-configurable field. Displays 1-65s, the xPico 110 wired device server module's TCP keepalive value. The default setting is 45.
<b>Telnet Supported</b>	Non-configurable field. Indicates if Telnet sessions are permitted.
<b>Telnet Port</b>	Non-configurable field. Displays the xPico 110 wired device server module's port for Telnet sessions.
<b>Web Port</b>	Non-configurable field. Displays the xPico 110 wired device server module's port for Web Manager configuration.
<b>Maximum Baud Rate Supported</b>	Non-configurable field. Displays the xPico 110 wired device server module's maximum baud rate. <i>Note: the xPico 110 wired device server module may not currently be running at this rate.</i>
<b>Firmware Upgradeable</b>	Non-configurable field. Displays <b>True</b> , indicating the xPico 110 firmware is upgradeable as newer version become available.
<b>Supports Configurable Pins</b>	Non-configurable field. Displays <b>True</b> , indicating configurable pins are available on the xPico 110 wired device server module.
<b>Supports Email Triggers</b>	Non-configurable field. Displays <b>False</b> , indicating email triggers are not supported on xPico 110 wired device server module.
<b>Supports AES Data Stream</b>	Non-configurable field. Displays <b>True</b> . xPico 110 wired device server module supports AES encryption.
<b>Supports 485</b>	Non-configurable field. Displays <b>True</b> . xPico 110 wired device server module supports the RS-485 protocol.
<b>Supports 921K Baud Rate</b>	Non-configurable field. Displays <b>True</b> . xPico 110 wired device server module supports baud rates up to 921600 bits per second (bps).
<b>Supports HTTP Server</b>	Non-configurable field. Displays <b>True</b> .
<b>Supports HTTP Setup</b>	Non-configurable field. Displays <b>True</b> .
<b>Supports 230K Baud Rate</b>	Non-configurable field. Displays <b>True</b> .
<b>Supports GPIO</b>	Non-configurable field. Displays <b>True</b> , indicating the xPico 110 wired device server module supports General Purpose Input Output (GPIO).

## 4. Configuration Using Web Manager

You must configure the unit so that it can communicate on a network with your serial device. For example, you must set the way the unit will respond to serial and network traffic, how it will handle serial packets, and when to start or close a connection.

The unit's configuration is stored in nonvolatile memory and is retained without power. You can change the configuration at any time. The unit performs a reset after you change and store the configuration.

In this chapter, we describe how to configure the xPico 110 wired device server module using Web Manager, Lantronix's browser-based configuration tool. (For information on using Setup Mode, our command line configuration interface, see [5 Configuration via Telnet or Serial Port \(Setup Mode\)](#)).

**Note:** *The examples in this section show a typical device. Your device may have different configuration options.*

### Accessing Web Manager Using DeviceInstaller


**Note:** *For more information on DeviceInstaller, see [3 Using DeviceInstaller](#).*

1. Run DeviceInstaller and search for the list of available Lantronix device servers.
2. Click on the **xPico** folder. The list of available xPico 110 wired device server modules display.
3. Expand the list of xPico 110 wired device server modules by clicking the + symbol next to the **xPico** icon.
4. Select the xPico 110 unit by clicking its hardware address.
5. In the right pane, click the **Web Configuration** tab.
6. To view the xPico 110 Web Manager in the current DeviceInstaller window, click the **Go** button. To open the Web Manager in a web browser, click the **External Browser** button.

**Note:** *Alternatively, to open Web Manager, open your web browser and enter the IP address of the xPico 110 wired device server module.*

A dialog box appears to prompt for a User Name and Password.

Figure 4-1. Web Manager Login Window

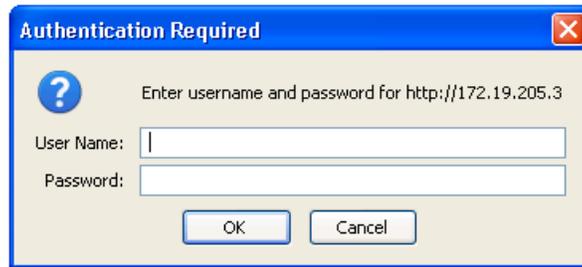


The image shows a dialog box titled "Authentication Required" with a question mark icon. The text inside says "Enter username and password for http://172.19.205.3". There are two input fields: "User Name:" and "Password:". Below the fields are two buttons: "OK" and "Cancel".

7. Perform one of the following:
- ♦ If no Telnet password has been defined, leave both fields blank and click **OK**.
  - ♦ If a Telnet password has been defined, leave the username blank, type in the password, and then click **OK**.

The Web Manager displays.

**Note:** We recommend that you always use the enhanced password setting and create a strong 16 character password. See [Security Settings \(Option 6\)](#) on page 60.

Figure 4-2. Lantronix Web Manager

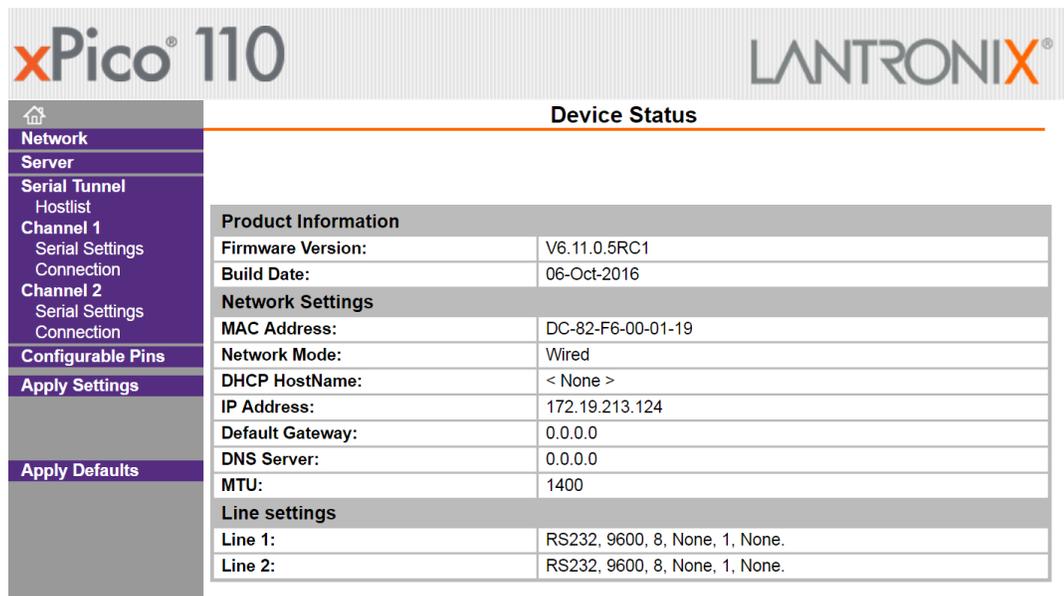

The image shows the Lantronix Web Manager interface for an xPico 110 device. The top header includes the "xPico 110" logo and the "LANTRONIX" logo. Below the header is a navigation menu on the left and a "Device Status" section on the right.

**Device Status**

Product Information	
Firmware Version:	V6.11.0.5RC1
Build Date:	06-Oct-2016
Network Settings	
MAC Address:	DC-82-F6-00-01-19
Network Mode:	Wired
DHCP HostName:	< None >
IP Address:	172.19.213.124
Default Gateway:	0.0.0.0
DNS Server:	0.0.0.0
MTU:	1400
Line settings	
Line 1:	RS232, 9600, 8, None, 1, None.
Line 2:	RS232, 9600, 8, None, 1, None.

The main menu is in the left pane of the Web Manager window.

## Network Configuration

The unit's network values display when you select **Network** from the main menu. The following sections describe the configurable parameters on the Network Settings page.

Figure 4-3. Network Settings

### Network Mode

1. Click **Network** from the main menu.
2. Note the following:

Network Mode	<b>Wired Only</b> is the only choice. It enables the Ethernet network connectivity.
--------------	---

### Automatic IP Address Configuration

An IP address can be assigned automatically. You then enter related network settings.

#### *To assign an IP address automatically:*

1. On the main menu, click **Network**.

2. Select **Obtain IP address automatically**.
3. Enter the following (as necessary):

<b>BOOTP</b>	Select <b>Enable</b> to permit the Bootstrap Protocol (BOOTP) server to assign the IP address from a pool of addresses automatically. Enable is the default.
<b>DHCP</b>	Select <b>Enable</b> to permit the Dynamic Host Configuration Protocol (DHCP) to assign a leased IP address to the xPico 110 unit automatically. Enable is the default.
<b>AutoIP</b>	Select <b>Enable</b> to permit the xPico 110 wired device server module to generate an IP in the 169.254.x.x address range with a Class B subnet. Enable is the default.
<b>DHCP Host Name</b>	Enter the desired host name for the xPico 110 wired device server module.

**Note:** Disabling BOOTP, DHCP, and AutoIP (all three checkboxes) is not advised as the only available IP assignment method will then be ARP or serial port.

4. When you are finished, click the **OK** button.
5. On the main menu, click **Apply Settings**.

### Static IP Address Configuration

You manually assign an IP address to the unit and enter related network settings.

#### To assign an IP address manually:

1. On the main menu, click **Network**.
2. Select **Use the following IP configuration**.
3. Enter the following (as necessary):

<b>IP Address</b>	If DHCP is not used to assign IP addresses, enter it manually in decimal-dot notation. The IP address must be set to a unique value in the network.
<b>Subnet Mask</b>	A subnet mask defines the number of bits taken from the IP address that are assigned for the host part.
<b>Default Gateway</b>	The gateway address, or router, allows communication to other LAN segments. The gateway address should be the IP address of the router connected to the same LAN segment as the unit. The gateway address must be within the local network.
<b>DNS Server</b>	The DNS server allows the name of a remote machine to be resolved automatically. Enter the IP address of the DNS server. If the device is DHCP enabled, the DHCP server provides the DNS server IP address, which will override this configured value.  <b>Note:</b> This setting is applicable only in Manual Connection mode.

4. When you are finished, click the **OK** button.
5. On the main menu, click **Apply Settings**.

### Ethernet Configuration

You must specify the speed and direction of data transmission.

#### To specify how data will be transmitted:

1. On the main menu, click **Network**.
2. Enter the following (as necessary):

<b>Auto Negotiate</b>	<p>With this option, the Ethernet port auto-negotiates the speed and duplex with the hardware endpoint to which it is connected. This is the default.</p> <p>If this option is not selected, the complete the fields that become available:</p> <ul style="list-style-type: none"> <li>♦ <b>Speed:</b> The speed of data transmission. The default is 100 Mbps.</li> <li>♦ <b>Duplex:</b> The direction of data transmission. The default is Full.</li> </ul>
-----------------------	---

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

## Server Configuration

The unit's server values display when you select **Server** from the main menu. The following sections describe the configurable parameters on the Server Settings page.

Figure 4-4. Server Settings

### Server Settings

**Server Configuration**

Enhanced Password:  Enable  Disable

Telnet/Web Manager Password:

Retype Password:

**Advanced**

ARP Cache Timeout (secs):

TCP Keepalive (secs):

Monitor Mode @ Bootup:  Enable  Disable

CPU Performance Mode:  Low  Regular  High

HTTP Server Port:

Config Server Port:

MTU Size:

TCP Re-transmission timeout (ms):

To configure the xPico 110 device server settings:

1. On the main menu, click **Server**.
2. Configure or modify the following fields:

### Server Configuration

<p><b>Enhanced Password</b></p> <p><i>Note:</i> We recommend that you always enable the enhanced password setting, and create a strong 16 character password.</p>	<p>Select whether to enable enhanced password:</p> <ul style="list-style-type: none"> <li>♦ <b>Enable:</b> selecting this option enables enhanced password creation, allowing you to create passwords up to 16 bytes in length.</li> <li>♦ <b>Disable:</b> selecting this option disables enhanced password creation, allowing you to create basic passwords up to 4 bytes in length.</li> </ul>
<p><b>Telnet/Web Manager Password</b></p>	<p>Enter the password required for Telnet configuration and Web Manager access.</p>

<b>Retype Password</b>	Re-enter the password required for Telnet configuration and Web Manager access.
------------------------	---

### Advanced

<b>ARP Cache Timeout (secs)</b>	When the unit communicates with another device on the network, it adds an entry into its ARP table. ARP Cache timeout defines the number of seconds (1-600) before it refreshes this table. Entering 0 disables the ARP cache timeout.
<b>TCP Keepalive (secs)</b>	TCP Keepalive time defines how many seconds the unit waits during an inactive connection before checking its status. If the unit does not receive a response, it drops that connection. Enter a value between <b>0</b> and <b>60</b> seconds. <b>0</b> disables keepalive. The default setting is <b>45</b> .
<b>Monitor Mode @ Bootup</b>	Select <b>Disable</b> to disable entry into the monitor mode using the 'yyy' or 'xx1' key sequence at startup. This field prevents the unit from entering monitor mode by interpreting the stream of characters that are received during the device server's initialization at startup.
<b>CPU Performance Mode</b>	Select the xPico 110 wired device server module's performance mode. Higher performance settings require more energy. <b>Regular</b> is 48 Mhz; <b>High</b> is 88 Mhz. The default is <b>Regular</b> .
<b>HTTP Server Port</b>	This option allows the configuration of the web server port number. The valid range is <b>1-65535</b> . The default port is <b>80</b> .
<b>Config Server Port</b>	Not applicable for this product.
<b>MTU Size</b>	The Maximum Transmission Unit (MTU) is the largest physical packet size a network can transmit for TCP and UDP. Enter between <b>512</b> and <b>1400</b> bytes. The default is <b>1400</b> bytes.
<b>TCP Re-transmission timeout (ms)</b>	The desired TCP re-transmission timeout value. If the ACK is not received for a packet sent from the xPico 110 device, then the unit will retransmit the data. The valid range is 500-4000 msec.

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

## Host List Configuration

The xPico 110 wired device server module scrolls through the host list until it connects to a device listed in the host list table. After a successful connection, the unit stops trying to connect to any others. If this connection fails, the unit continues to scroll through the table until the next successful connection.

The host list supports a minimum of 1 and a maximum of 12 entries. Each entry contains an IP address and a port number.

**Note:** The host list is disabled for Manual and Modem Mode. The unit does not accept a data connection from a remote device when the hostlist option is enabled.

**To configure the xPico 110 host list:**

1. On the main menu, click **Hostlist**.

**Figure 4-5. Hostlist Settings**

### Hostlist Settings

---

**Retry Settings**

Retry Counter:       Retry Timeout:

**Host Information**

No.	Host Address	Port	No.	Host Address	Port
1	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>	2	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>
3	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>	4	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>
5	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>	6	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>
7	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>	8	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>
9	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>	10	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>
11	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>	12	<input type="text" value="0.0.0.0"/>	<input type="text" value="0"/>

2. Enter or modify the following fields:

**Retry Settings**

<b>Retry Counter</b>	Enter the value for the number of times the xPico 110 wired device server module should attempt to retry connecting to the host list.
<b>Retry Timeout</b>	Enter the duration (in milliseconds) the xPico 110 wired device server module should abandon attempting a connection to the host list.

**Host Information**

<b>Host Address</b>	Enter or modify the host's IP address.
<b>Port</b>	Enter the target port number.

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

## Channel 1 and 2 Configuration

The Channel 1 and Channel 2 configuration define how the serial ports respond to network and serial communication.

**Note:** Directions for configuring Channel 1 serial settings and connection apply for Channel 2 configuration, except where indicated.

### Serial Settings

To configure the channel's serial settings:

1. On the main menu, click **Serial Settings** (under **Channel 1**) to display the Serial Settings window.

Figure 4-6. Channel Serial Settings

2. In the available fields, enter the following information:

#### Channel 1

<b>Disable Serial Port</b>	<p>When selected, disables communication through the serial port. The serial port is enabled by default.</p> <p><b>Note:</b> This checkbox only applies to Channel 2.</p>
----------------------------	---

**Port Settings**

<b>Protocol</b>	<p>From the drop-down menu, select the protocol type for the selected channel.</p> <ul style="list-style-type: none"> <li>♦ <b>Channel 1:</b> RS232, RS422/RS485 – 4 wire or RS485 – 2 wire protocols.</li> <li>♦ <b>Channel 2:</b> RS232 only</li> </ul>
<b>Flow Control</b>	<p>Flow control manages data flow between devices in a network to ensure it is processed efficiently. Too much data arriving before a device is prepared to manage it causes lost or retransmitted data. None is the default.</p> <ul style="list-style-type: none"> <li>♦ <b>Channel 1:</b> None, Xon/Xoff, Xon/Xoff Pass Chars to Host or CTS/RTS (hardware).</li> <li>♦ <b>Channel 2:</b> None, Xon/Xoff or Xon/Xoff Pass Chars to Host</li> </ul>
<b>Baud Rate</b>	<p>The unit and attached serial device, such as a modem, must agree on a speed or baud rate to use for the serial connection. Valid baud rates are 300, 600, 1200, 2400, 4800, 9600 (default), 19200, 38400, 57600, 115200, or 230400, 460800, or 921600</p> <p><b>Note:</b> It is recommended to use hardware flow control for baud rates of 38400 and higher or it could result in data loss. Baud rates 460800 and 921600 are available for selection only when CPU performance mode is set to High.</p>
<b>Data Bits</b>	<p>Indicates the number of bits in a transmitted data package. The default is 8.</p>
<b>Parity</b>	<p>Checks for the parity bit. The default is None.</p>
<b>Stop Bits</b>	<p>The stop bit follows the data and parity bits in serial communication. It indicates the end of transmission. The default is 1.</p>

**Pack Control**

<b>Enable Packing</b>	<p>Select to enable packing on the xPico 110 wired device server module.</p> <p>Two firmware-selectable packing algorithms define how and when packets are sent to the network.</p> <p>The standard algorithm is optimized for applications in which the unit is used in a local environment, allowing for very small delays for single characters, while keeping the packet count low.</p> <p>The alternate packing algorithm minimizes the packet count on the network and is especially useful in applications in a routed Wide Area Network (WAN). Adjusting parameters in this mode can economize the network data stream.</p> <p>Disabled by default.</p>
<b>Idle Gap Time</b>	<p>Select the maximum time for inactivity. The default time is <b>12</b> milliseconds.</p>
<b>Match 2 Byte Sequence</b>	<p>Use to indicate the end of a series of data to be sent as one group. The sequence must occur sequentially to indicate end of the data collection to the xPico 110 wired device server module. The default is <b>No</b>.</p>
<b>Match Bytes</b>	<p>Use to indicate the end of a series of data to be sent as one group. Set this value to <b>00</b> if specific functions are not needed.</p>

<b>Send Frame Immediate</b>	After the detection of the byte sequence, indicates whether to send the data frame or the entire buffer. Select <b>Yes</b> to send only the data frame. The default setting is <b>No</b> .
<b>Send Trailing Bytes</b>	Select the number of bytes to send after the end-of-sequence characters. The default is <b>None</b> .

#### **Flush Input Buffer (Serial to Network)**

<b>With Active Connect</b>	Select <b>Yes</b> to clear the input buffer with a connection that is initiated from the device to the network. The default is <b>No</b> .
<b>With Passive Connect</b>	Select <b>Yes</b> to clear the input buffer with a connection initiated from the network to the device. The default is <b>No</b> .
<b>At Time of Disconnect</b>	Select <b>Yes</b> to clear the input buffer when the network connection to or from the device is disconnected. The default is <b>No</b> .

#### **Flush Output Buffer (Network to Serial)**

<b>With Active Connect</b>	Select <b>Yes</b> to clear the output buffer with a connection that is initiated from the device to the network. The default is <b>No</b> .
<b>With Passive Connect</b>	Select <b>Yes</b> to clear the output buffer with a connection initiated from the network to the device. The default is <b>No</b> .
<b>At Time of Disconnect</b>	Select <b>Yes</b> to clear the output buffer when the network connection to or from the device is disconnected. The default is <b>No</b> .

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

## Connection Settings - TCP

To configure a channel's TCP settings:

1. On the main menu, click **Connection**. The Connection Settings window for the channel displays.

Figure 4-7. TCP Connection Settings

### Connection Settings

**Channel 1**

**Connect Protocol**  
Protocol: TCP

**Connect Mode**

<p><b>Passive Connection:</b></p> <p>Accept Incoming: <span style="border: 1px solid gray; padding: 2px;">Yes</span></p> <p>Password Required: <input type="radio"/> Yes <input checked="" type="radio"/> No</p> <p>Password: <input style="width: 100%;" type="text"/></p> <p>Modem Escape Sequence Pass Through: <input checked="" type="radio"/> Yes <input type="radio"/> No</p>	<p><b>Active Connection:</b></p> <p>Active Connect: <span style="border: 1px solid gray; padding: 2px;">None</span></p> <p>Start Character: 0x<span style="border: 1px solid gray; padding: 2px;">0D</span> (in Hex)</p> <p>Modem Mode: <span style="border: 1px solid gray; padding: 2px;">None</span></p> <p>Show IP Address After RING: <input checked="" type="radio"/> Yes <input type="radio"/> No</p>
--	--

---

**Endpoint Configuration:**

Local Port: <span style="border: 1px solid gray; padding: 2px;">10001</span>	Remote Port: <span style="border: 1px solid gray; padding: 2px;">0</span>
<input type="checkbox"/> Auto increment Local Port for active connect	Remote Host: <span style="border: 1px solid gray; padding: 2px;">0.0.0.0</span>

---

**Common Options:**

Telnet Com Port Cntrl: <span style="border: 1px solid gray; padding: 2px;">Disable</span>	Connect Response: <span style="border: 1px solid gray; padding: 2px;">None</span>
Terminal Name: <input style="width: 100%;" type="text"/>	Use Hostlist: <input type="radio"/> Yes <input checked="" type="radio"/> No
	LED: <span style="border: 1px solid gray; padding: 2px;">Blink</span>

---

**Disconnect Mode**

On Mdm_Ctrl_In Drop: <input type="radio"/> Yes <input checked="" type="radio"/> No	Hard Disconnect: <input checked="" type="radio"/> Yes <input type="radio"/> No
Check EOT(Ctrl-D): <input type="radio"/> Yes <input checked="" type="radio"/> No	Inactivity Timeout: <span style="border: 1px solid gray; padding: 2px;">0</span> : <span style="border: 1px solid gray; padding: 2px;">0</span> (mins : secs)

2. In the available fields, enter or modify the following information:

#### Connect Protocol

<b>Protocol</b>	From the drop-down menu, select <b>TCP</b> .
-----------------	--

#### Connect Mode: Passive Connection

<b>Accept Incoming</b>	Select <b>Yes</b> to accept incoming connections. The default is <b>Yes</b> .
<b>Password Required</b>	Determines whether a password is required for an incoming passive connection. This field is not available when a password is set for Telnet mode.
<b>Password</b>	If <b>Password Required</b> was set to <b>Yes</b> , enter the password for passive connections.
<b>Modem Escape Sequence Pass Through</b>	Select <b>Yes</b> or <b>No</b> to indicate whether you wish to enable modem escape sequence pass through. <b>Yes</b> is selected by default.

#### Connect Mode: Active Connection

<b>Active Connect</b>	Select <b>None</b> to disable <b>Active Connect</b> . Otherwise, indicate the connection type from the drop-down list: <ul style="list-style-type: none"> <li>◆ <b>With Any Character:</b> Attempts to connect when any character is received from the serial port.</li> <li>◆ <b>With Active Mdm Ctrl In:</b> Accepts external connection requests only when the <b>Modem Control In</b> input is asserted.</li> <li>◆ <b>With Start Character:</b> Attempts to connect when it receives a specific start character from the serial port. The default start character is carriage return.</li> <li>◆ <b>Manual Connection:</b> Attempts to connect when directed by a command string received from the serial port.</li> <li>◆ <b>Auto Start:</b> Automatically connects to the remote IP address and port after booting up.</li> </ul>
<b>Start Character</b>	If Active Connect is set to <b>With Start Character</b> , enter the start character in this field.
<b>Modem Mode</b>	Indicates the on-screen response type when in Modem Mode (if <b>Modem Mode</b> is enabled).
<b>Show IP Address After Ring</b>	Indicates whether to display the remote IP address upon connection. The default setting is <b>Yes</b> .

#### Endpoint Configuration

<b>Local Port</b>	Enter the local port number.
<b>Auto increment Local Port for active connect</b>	Select to auto-increment the local port number for new outgoing connections. The range of auto-incremented port numbers is <b>50,000</b> to <b>59,999</b> and loops back to the beginning when the maximum range is reached.
<b>Remote Port</b>	Enter the remote port number.
<b>Remote Host</b>	Enter the IP address of the remote device.

### Common Options

<b>Telnet Com Port Cntrl</b>	<i>This field is available for configuration only when <b>Active Connect</b> is set to <b>None</b>. Select <b>Enable</b> to permit Telnet communication to the unit. The <b>Telnet Com Port Cntrl</b> feature is used in conjunction with the <b>Com Port Redirector (CPR)</b> utility. (See the CPR online Help for details.)</i>
<b>Terminal Name</b>	This field is available for configuration only when Telnet Mode is set to <b>Enable</b> . Use the terminal name for the Telnet terminal type. Enter only one name. When this option is enabled, the unit also reacts to the end of record (EOR) and binary options, which can be used for applications such as terminal emulation to IBM hosts.
<b>Connect Response</b>	A single character is transmitted to the serial port when there is a change in connection state. Default setting is <b>None</b> .
<b>Use Hostlist</b>	If this option is set to <b>True</b> , the device server scrolls through the host list until it connects to a device listed in the host list table. Once it connects, the unit stops trying to connect to any others. If this connection fails, the unit continues to scroll through the table until it connects to another IP in the host list. The host list is disabled for Manual Mode and for Modem Mode. The unit will not accept a data connection from a remote device when the host list option is enabled.
<b>LED</b>	Select <b>Blink</b> for the status LEDs to blink upon connection or <b>None</b> for no LED output.

### Disconnect Mode

<b>On Mdm_Ctrl_In Drop</b>	Set to <b>Yes</b> for the network connection to or from the serial port to disconnect (drop) when <b>Modem Control In</b> transitions from an asserted state to not asserted state. The default setting is <b>No</b> .
<b>Hard Disconnect</b>	When set to <b>Yes</b> , the TCP connection closes even if the remote site does not acknowledge the disconnect request.
<b>Check EOT (Ctrl-D)</b>	Select <b>Yes</b> to drop the connection when <b>Ctrl-D</b> or <b>Hex 04</b> is detected. Both <b>Telnet Com Port Cntrl</b> and <b>Check EOT (Ctrl+ D)</b> must be enabled for <b>Disconnect with EOT</b> to function properly. <b>Ctrl+D</b> is only detected going from the serial port to the network. The default setting is <b>No</b> .
<b>Inactivity Timeout</b>	Use this parameter to set an inactivity timeout. The unit drops the connection if there is no activity on the serial line before the set time expires. Enter time in the format mm:ss, where m is the number of minutes and s is the number of seconds. To disable the inactivity timeout, enter <b>00:00</b> .

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

## Connection Settings - UDP

To configure a channel's UDP settings:

1. On the main menu, click **Connection**. The Connection Settings window for the selected channel displays.
2. In the available fields, enter or modify the following information:

Figure 4-8. UDP Connection Settings

**Connection Settings**

---

**Channel 1**

**Connect Protocol**  
Protocol: UDP

**Datagram Mode:**  
Datagram Type: 00      Accept Incoming: Yes

**Endpoint Configuration:**  
Local Port: 10001      Remote Port: 0  
Remote Host: 0.0.0.0       Use Broadcast

**Device Address Table:**

No.	Dev Addr						
0	<span style="border: 1px solid gray; padding: 2px;">0</span>	1	<span style="border: 1px solid gray; padding: 2px;">0</span>	2	<span style="border: 1px solid gray; padding: 2px;">0</span>	3	<span style="border: 1px solid gray; padding: 2px;">0</span>
4	<span style="border: 1px solid gray; padding: 2px;">0</span>	5	<span style="border: 1px solid gray; padding: 2px;">0</span>	6	<span style="border: 1px solid gray; padding: 2px;">0</span>	7	<span style="border: 1px solid gray; padding: 2px;">0</span>
8	<span style="border: 1px solid gray; padding: 2px;">0</span>	9	<span style="border: 1px solid gray; padding: 2px;">0</span>	10	<span style="border: 1px solid gray; padding: 2px;">0</span>	11	<span style="border: 1px solid gray; padding: 2px;">0</span>
12	<span style="border: 1px solid gray; padding: 2px;">0</span>	13	<span style="border: 1px solid gray; padding: 2px;">0</span>	14	<span style="border: 1px solid gray; padding: 2px;">0</span>	15	<span style="border: 1px solid gray; padding: 2px;">0</span>

OK

### Connect Protocol

<b>Protocol</b>	Select <b>UDP</b> from the drop-down menu.
-----------------	--

### Datagram Mode

<b>Datagram Type</b>	Configures the remote IP or network broadcast address and the remote port. Enter <b>01</b> for directed or broadcast UDP. The default setting is <b>00</b> .
<b>Accept Incoming</b>	Select <b>Yes</b> to accept incoming UDP datagrams.

### Endpoint Configuration

<b>Local Port</b>	Enter the local port number.
<b>Remote Port</b>	Enter the port number of the remote device.

<b>Remote Host</b>	Enter the IP address of the remote device.
<b>Use Broadcast</b>	Select to broadcast the UDP datagram. The default is not to broadcast. <b>Note:</b> <i>Datagrams are sent as subnet-directed broadcasts.</i>
<b>Device Address Table</b>	The table is enabled when <b>Datagram Type</b> is set to <b>FD</b> . Enter values between <b>1</b> and <b>255</b> to identify units on the local network of device servers. <b>Note:</b> <i>Lantronix Tech Support supports Datagram type 01. Datagram Type FD is for OEM use.</i>

- When you are finished, click the **OK** button.
- On the main menu, click **Apply Settings**.

## Configurable Pin Settings

There are eight configurable hardware pins on the xPico 110 unit. For each pin, configure the pin function, communication direction, and activity level. For more information, see [9 GPIO Interface](#).

**To configure the xPico 110 wired device server module's Configurable Pins:**

- On the main menu, click **Configurable Pins**. The Configurable Pins page opens.

Figure 4-9. Configurable Pins Settings

Configurable Pin Settings			
CP	Function	Direction	Active Level
1	General Purpose I/O	<input checked="" type="radio"/> Input <input type="radio"/> Output	<input checked="" type="radio"/> Low <input type="radio"/> High
2	General Purpose I/O	<input checked="" type="radio"/> Input <input type="radio"/> Output	<input checked="" type="radio"/> Low <input type="radio"/> High
3	General Purpose I/O	<input checked="" type="radio"/> Input <input type="radio"/> Output	<input checked="" type="radio"/> Low <input type="radio"/> High
4	General Purpose I/O	<input checked="" type="radio"/> Input <input type="radio"/> Output	<input checked="" type="radio"/> Low <input type="radio"/> High
5	General Purpose I/O	<input checked="" type="radio"/> Input <input type="radio"/> Output	<input checked="" type="radio"/> Low <input type="radio"/> High
6	General Purpose I/O	<input checked="" type="radio"/> Input <input type="radio"/> Output	<input checked="" type="radio"/> Low <input type="radio"/> High
7	General Purpose I/O	<input checked="" type="radio"/> Input <input type="radio"/> Output	<input checked="" type="radio"/> Low <input type="radio"/> High
8	General Purpose I/O	<input checked="" type="radio"/> Input <input type="radio"/> Output	<input checked="" type="radio"/> Low <input type="radio"/> High

- Configure or modify the following fields for each pin:

<b>Function</b>	From the drop-down menu, select the purpose of the specified pin. See <b>Configurable Pin Functions</b> (below) for a description of each available function.
<b>Direction</b>	Select whether the pin inputs or outputs.
<b>Active Level</b>	Select the signal active level (Low or High).

## Configurable Pin Functions

<b>General Purpose I/O</b>	Monitors input using the 77F0 port or controls output by the 77F0 port.
<b>Modem Ctrl Channel 1 In</b>	For DTE device configuration this would be the DCD control line.
<b>Modem Ctrl Channel 1 Out</b>	For DTE device configuration this would be the DTR control line.
<b>RS485 Select Channel 1</b>	Optional control signal that enables toggling between RS232 and RS485 on OEM hardware design.
<b>RS485 2-Wire Channel 1</b>	Optional control signal that enables toggling between RS485 2-wire and 4-wire mode on OEM hardware design.
<b>Serial Channel 1 Status LED</b>	Indicates channel 1 status and extended diagnostics.
<b>Serial Channel 2 Status LED</b>	Indicates channel 2 status and extended diagnostics.

3. When you are finished, click the **OK** button.
4. On the main menu, click **Apply Settings**.

## Apply Settings

1. To save and apply the configuration changes to the device server, click the **Apply Settings** button.

**Note:** Clicking **OK** on each page does not change the configuration on the device. Clicking the **OK** button tells the xPico 110 wired device server module what changes to use; the **Apply Settings** button makes the changes permanent and reboots the xPico 110 wired device server module.

## Apply Defaults

1. Click the **Apply Defaults** button to set the device server back to the default settings. For details see [Default Settings](#) on page 64.
2. Click **Yes** to set factory settings or click **No** to cancel.

Figure 4-10. Apply Settings and Apply Defaults

The screenshot shows the web manager interface for the xPico 110 device. The left sidebar contains a navigation menu with the following items: Home, Network, Server, Serial Tunnel, Hostlist, Channel 1, Serial Settings, Connection, Channel 2, Serial Settings, Connection, Configurable Pins, **Apply Settings**, and **Apply Defaults**. Two orange arrows point to the 'Apply Settings' and 'Apply Defaults' items. The main content area is titled 'Device Status' and contains a table of configuration parameters.

Product Information	
Firmware Version:	V6.11.0.5RC1
Build Date:	06-Oct-2016
Network Settings	
MAC Address:	DC-82-F6-00-01-19
Network Mode:	Wired
DHCP HostName:	< None >
IP Address:	172.19.213.124
Default Gateway:	0.0.0.0
DNS Server:	0.0.0.0
MTU:	1400
Line settings	
Line 1:	RS232, 9600, 8, None, 1, None.
Line 2:	RS232, 9600, 8, None, 1, None.

## 5. Configuration via Telnet or Serial Port (Setup Mode)

You must configure the unit so that it can communicate on a network with your serial device. As an alternative to using a web browser, as described in the previous chapter, you can use the following procedures remotely or locally:

- ♦ Use a Telnet connection to configure the unit over the network.
- ♦ Use a terminal or terminal emulation program to access the serial port locally.

The series of prompts at which you enter configuration settings is called **Setup Mode**.

**Note:** Detailed information about other setup methods is available from your Lantronix Sales Associate.

The unit's configuration is stored in nonvolatile memory and is retained without power. You can change the configuration at any time. The unit performs a reset after the configuration has been changed and stored.

This chapter tells you how to access Setup Mode and the general procedure for using it. To complete the configuration, continue with [6 Setup Mode: Server Configuration](#), [7 Setup Mode: Channel Configuration](#), and [8 Setup Mode: Advanced Settings](#).

**Note:** The menus in the configuration chapters show a typical device. Your device may have different configuration options.

### Accessing Setup Mode

#### Telnet Connection

To configure the unit over the network, establish a Telnet connection to port 9999.

**Note:** You can also use *DeviceInstaller* to access Telnet. Select the device from the main window list, and click the **Telnet Configuration** tab. Skip steps 1 and 2.

**To establish a Telnet connection:**

1. From the Windows **Start** menu, click **Run** and type the following command, where x.x.x.x is the IP address, and 9999 is the unit's fixed network configuration port number:

Windows: telnet x.x.x.x 9999

UNIX: telnet x.x.x.x:9999

2. Click **OK**. The following information displays.

**Figure 5-1. xPico 110 Address**

```
MAC address DC82F6000119
Software version V6.11.0.5RC1 (161006) XPICO-SMT
AES library version 1.8.2.1
Press Enter for Setup Mode
```

3. To enter Setup Mode, **press Enter within 5 seconds**. The configuration settings display, followed by the Change Setup menu.

**Figure 5-2. Setup Menu Options**

```
Change Setup:

 0 Server

 1 Channel 1

 2 Channel 2

 5 Expert

 6 Security

 7 Defaults

 8 Exit without save

 9 Save and exit           Your choice ?
```

4. Select an option on the menu by entering the number of the option in the **Your choice ?** field and pressing **Enter**.
5. To enter a value for a parameter, type the value and press **Enter**, or to confirm a current value, just press **Enter**.
6. When you are finished, save the new configuration (option 9). The unit reboots.

## Serial Port Connection

To configure the unit through a serial connection:

1. Connect a console terminal or PC running a terminal emulation program to your unit's serial port.
2. Set the terminal emulator serial port settings to 9600 baud, 8 bits, no parity, 1 stop bit, no flow control.

**Note:** *The xPico 110 wired device server module always uses these serial port settings on boot-up.*

3. Reset the xPico 110 unit by cycling the unit's power (turning the power off and back on). Immediately upon resetting the device, enter three lowercase **x** characters (**xxx**).

**Note:** *The easiest way to enter Setup Mode is to hold down the **x** key at the terminal (or emulation) while resetting the unit. **You must do this within three seconds of resetting the xPico 110 wired device server module.***

At this point, the screen display is the same as when you use a Telnet connection. To continue, go to step 4, above, in the section, [Telnet Connection](#).

## Exiting Setup Mode

**To exit setup mode:**

You have two options:

- ♦ To save all changes and reboot the device, select option **9 Save and exit** from the Change Setup menu. All values are stored in nonvolatile memory.
- ♦ To exit the configuration mode without saving any changes or rebooting, select option **8 Exit without save** from the Change Setup menu.

## 6. Setup Mode: Server Configuration

This chapter explains how to configure the network settings.

**Note:** Current values appear in parentheses.

### Server Configuration (Option 0)

The unit's basic network parameters display when you select **Server configuration** (option 0). The **IP Address**, **Set Gateway IP Address**, and **Netmask** fields display the current values.

```
IP Address : (000) .(000) .(000) .(000)

Set Gateway IP Address (N) ?

Netmask: Number of Bits for Host Part (0=default) (0)

Set DNS Server IP addr (N) ?

Change Telnet/Web Manager password (N) ?
```

### IP Address

If DHCP is not used to assign IP addresses, enter the IP address manually. The IP address must be set to a unique value in the network. Enter each octet and press **Enter** between each section. The current value displays in parentheses.

```
IP Address : ( 0) ( 0) ( 0) ( 0) _
```

If DHCP is used, the third octet of the IP address sets the BootP/DHCP/AutoIP options. The following table shows the bits you can manually configure to force the xPico 110 wired device server module to disable AutoIP, DHCP, or BootP. To disable an option, set the appropriate bit.

**Table 6-1. BootP/DHCP/AutoIP Options**

Options	Bit
AutoIP	0
DHCP	1
BootP	2

For example, if the third octet is 0.0.5.0, the AutoIP and BootP options are disabled; only DHCP is enabled. (The value 5 results from adding the binary equivalents of 0 and 2.) This is the most common setting when using DHCP.

## Set Gateway IP Address

The gateway address, or router, allows communication to other LAN segments. The gateway address should be the IP address of the router connected to the same LAN segment as the unit. The gateway address must be within the local network. The default is **N** (No), meaning the gateway address has not been set. To set the gateway address, type **Y** and enter the address.

```
Set Gateway IP Address (N) ? Y
Gateway IP addr (000) (000) (000) (000)_
```

## Netmask: Number of Bits for Host Part

A netmask defines the number of bits taken from the IP address that are assigned for the host part.

```
Netmask: Number of Bits for Host Part (0=default) (0) _
```

**Note:** Class A: 24 bits; Class B: 16 bits; Class C: 8 bits

The unit prompts for the number of host bits to be entered, then calculates the netmask, which appears in standard decimal-dot notation (for example, 255.255.255.0) when the saved parameters display.

Table 6-2. Standard IP Network Netmasks

Network Class	Host Bits	Netmask
A	24	255.0.0.0
B	16	255.255.0.0
C	8	255.255.255.0

## Set DNS Server IP Address

The DNS server allows the name of a remote machine to be resolved automatically. The default is **N** (No), indicating the DNS server address has not been set. To set the DNS server address, type **Y**. At the prompt, enter the DNS server address. If the device is DHCP enabled, the DHCP server provides the DNS server IP address, which will override this configured value.

**Note:** This setting is applicable only in Manual Connection mode.

```
Set DNS Server IP addr <N> ?
```

## Change Telnet/Web Manager Password

Setting the Telnet/Web Manager password prevents unauthorized access to the setup menu through a Telnet connection to port 9999 or through web pages.

Please protect your device from unauthorized access and follow the instructions below:

- ◆ Always select Y to enable Telnet/Web Manager password
- ◆ Enable the enhanced password setting and create a strong 16-character password. For details, see [Security Settings \(Option 6\)](#) on page 60.

**Note:** We do not recommend that you only use the 4-character basic password as it does not offer sufficient security. Using no password is very dangerous.

```
Change Telnet/Web Manager password (N) ? _
```

## DHCP Name

If a DHCP server has automatically assigned the IP address and network settings, you can discover the unit by using the DeviceInstaller network search feature.

There are three methods for assigning DHCP names to the unit.

**Default DHCP Name:** If you do not change the DHCP name, and you are using an IP of 0.0.0.0, then the DHCP name defaults to CXXXXXX (XXXXXX is the last 6 digits of the MAC address shown on the label on the bottom/side of the unit). For example, if the MAC address is 00-20-4A-12-34-56, then the default DHCP name is C123456.

**Custom DHCP Name:** You can create your own DHCP name. If you are using an IP address of 0.0.0.0, then the last option in Server configuration is **Change DHCP device name**. This option allows you to change the DHCP name to an alphanumeric name (LTX in our example).

```
Change DHCP device name (not set) ? (N) Y
```

```
Enter new DHCP device name : LTX
```

**Numeric DHCP Name:** You can change the DHCP name by specifying the last octet of the IP address. When you use this method, the DHCP name is LTXYY where YY is what you chose for the last octet of the IP address. If the IP address you specify is 0.0.0.12, then the DHCP name is LTX12. This method only works with 2 digit numbers (01-99).

## 7. Setup Mode: Channel Configuration

This chapter explains how to configure the serial port.

### Channel 1 (Option 1) or Channel 2 (Option 2)

Select **Channel 1** (option 1) or **Channel 2** (option 2) from the Change Setup menu to define how the serial port responds to network and serial communications. The following sections describe the configurable parameters within the **Channel** configuration menu.

Figure 7-1. Serial Port Parameters

```
Baudrate (9600) ?
I/F Mode (4C) ?
Flow (00) ?
Port No (10001) ?
ConnectMode (C0) ?
Send '+++ ' in Modem Mode (Y) ?
Show IP addr after 'RING' (Y) ?
Auto increment source port (N) ?
Remote IP Address : (000) .(000) .(000) .(000)
Remote Port (0) ?
DisConnMode (00) ?
FlushMode (00) ?
DisConnTime (00:00) ?:
SendChar 1 (00) ?
SendChar 2 (00) ?
```

### Baudrate

The unit and attached serial device, such as a modem, must agree on a speed or baud rate to use for the serial connection. Valid baud rates are 300, 600, 1200, 2400, 4800, 9600 (default), 19200, 38400, 57600, 115200, and 230400 bits per second. xPico 110 wired device server module also supports high-performance baud rates of 460800 and 921600 bits per second. (See [CPU Performance](#) on page 59).

```
Baudrate (9600) ? _
```

## I/F (Interface) Mode

The Interface (I/F) Mode is a bit-coded byte entered in hexadecimal notation.

I/F Mode (4C) ? _
-------------------

The following table displays available I/F Mode options:

**Note:** All bit positions in the table that are blank represent “don’t care” bits for that particular option, which can be set to either a 0 or 1 value.

Table 7-1. Interface Mode Options

I/F Mode Option	7	6	5	4	3	2	1	0
RS-232C <sup>(1)</sup>							0	0
RS-422/485							0	1
RS-485 2-wire							1	1
7 Bit					1	0		
8 Bit					1	1		
No Parity			0	0				
Even Parity			1	1				
Odd Parity			0	1				
1 stop bit	0	1						
2 stop bits <sup>(1)</sup>	1	1						

(1) 2 stop bits are implemented by the software. This might influence performance.

The following table demonstrates how to build some common Interface Mode settings:

Table 7-2. RS232 Interface Mode Settings

Common I/F Mode Setting	Binary	Hex
RS-232C, 8-bit, No Parity, 1 stop bit	0100 1100	4C
RS-232C, 7-bit, Even Parity, 1 stop bit	0111 1000	78

## Flow

Flow control sets the local handshaking method for stopping serial input/output.

Flow (00) ? _
---------------

Use the following table to select flow control options:

Table 7-3. Flow Control Options

Flow Control Option	Hex
No flow control	00
XON/XOFF flow control	01
Hardware handshake with RTS/CTS lines	02
XON/XOFF pass characters to host	05

## Port Number

The setting represents the source port number in TCP connections. It is the number that identifies the channel for remote initiating connections.

Port No (10001) ? \_

The default setting for Port 1 is **10001**. The default setting for Port 2 is **10002**. The range is **1-65535**, except for the following reserved port numbers:

Table 7-4. Reserved Port Numbers

Port Numbers	Reserved for
1 – 1024	Reserved (well known ports)
9999	Telnet setup
14000-14009	Reserved for Redirector
30704	Reserved (77F0h)
30718	Reserved (77FEh)

**WARNING:** We recommend that you not use the reserved port numbers for this setting as incorrect operation may result.

Use Port **0** for the outgoing local port to change with each connection. The port range is **50,000** to **59,999**. Each subsequent connection increments the number by 1 (it wraps back around to 50,000).

Only use this automatic port increment feature to initiate a connection using TCP. Set the port to a non-zero value when the unit is in a passive mode or when using UDP instead of TCP.

## Connect Mode

Connect Mode defines how the unit makes a connection, and how it reacts to incoming connections over the network.

ConnectMode (C0) ? \_

Enter Connect Mode options in hexadecimal notation.

**Note:** All bit positions in the table that are blank represent “don’t care” bits, for that particular option, which can be set to either a 0 or 1 value.

Table 7-5. Connect Mode Options

Connect Mode Option	7	6	5	4	3	2	1	0
<b>a) Incoming Connection</b>								
Never accept incoming	0	0	0					
Accept with active Modem Control In	0	1	0					
Always Accept	1	1	0					
<b>b) Response</b>								
Nothing (quiet)				0				
Character response (C=connect, D=disconnect, N=unreachable)				1				
<b>c) Active Startup</b>								
No active startup					0	0	0	0
With any character					0	0	0	1
With active Modem Control In					0	0	1	0
With a specific start character					0	0	1	1
Manual connection					0	1	0	0
Autostart					0	1	0	1
Hostlist	0	0	1	0				
<b>d) Datagram Type</b>								
Directed UDP					1	1	0	0
<b>e) Modem Mode</b>								
No Echo			0	0		1	1	
Data Echo & Modem Response (Numeric)			0	1		1	1	1
Data Echo & Modem Response (Verbose)			0	1		1	1	0
Modem Response Only (Numeric)			0	0	1	1	1	1
Modem Response Only (Verbose)			0	0	1	1	1	0

### a) Incoming Connection

<b>Never Accept Incoming</b>	Rejects all external connection attempts.
<b>Accept with active Modem</b>	Accepts external connection requests only when the <b>Modem</b>

<b>Control In</b>	<b>Control In</b> input is asserted. Cannot be used with Modem Mode.
<b>Always Accept</b>	Accepts any incoming connection when a connection is not already established. Default setting.

### b) Response

<b>Character Response</b>	<p>A single character is transmitted to the serial port when there is a change in connection state:</p> <p><b>C</b> = connected, <b>D</b> = disconnected, <b>N</b> = host unreachable.</p> <p>The IP address of the host connecting to the CoBos device will be provided when you use verbose mode.</p> <p>This option is overridden when the <b>Active Start Modem Mode</b> or <b>Active Start Host List</b> is in effect. Default setting is Nothing (quiet).</p>
---------------------------	---

### c) Active Startup

<b>No Active Startup</b>	Does not attempt to initiate a connection under any circumstance. Default setting.
<b>With Any Character</b>	Attempts to connect when any character is received from the serial port.
<b>With active Modem Control In</b>	Attempts to connect when the <b>Modem Control In</b> input changes from not asserted to asserted.
<b>With a Specific Start Character</b>	Attempts to connect when it receives a specific start character from the serial port. The default start character is carriage return.

<b>Manual Connection</b>	<p>Attempts to connect when directed by a command string received from the serial port. The first character of the command string must be a C (ASCII 0x43), and the last character must be either a carriage return (ASCII 0x0D) or a line feed (0x0A). No blanks or space characters may be in the command string. Between the first and last command string characters must be a full or partial destination IP address and may be a destination port number.</p> <p>The IP address must be in standard decimal-dot notation and may be a partial address, representing the least significant 1, 2, or 3 bytes of the remote IP address. The period is required between each pair of IP address numbers.</p> <p>If present, the port number must follow the IP address, must be presented as a decimal number in the range <b>1-65535</b>, and must be preceded by a forward slash (ASCII 0x2F). The slash separates the IP address and the port number. If you omit the port number from a command string, the internally stored remote port number starts a connection.</p> <p>If a partial IP address is presented in a command string, it is interpreted to be the least significant bytes of the IP address and uses the internally stored remote IP address to provide the most significant bytes of the IP address. If the IP address entered is 0.0.0.0/0, the device server enters Monitor Mode.</p> <p>For example, if the remote IP address already configured in the unit is 129.1.2.3, then an example command string would be C3/7. (This would connect to 129.1.2.3 and port 7.) You may also use a different ending for the connection string. For example, C50.1/23 would connect you to 129.1.50.1 and port 23.</p> <p>If an IP address does not follow the first command string character (which is "C"), the subsequent character string is interpreted as the host name and domain to be used in DNS lookup. This character string can include a destination port number as well. The port number can be preceded by either a forward slash (/) or a colon (:).</p>
--------------------------	--

Table 7-6. Manual Connection Address Example

Command String	Result if remote IP is 129.1.2.3 and remote port is 1234
C121.2.4.5/1	Complete override; connection is started with host 121.2.4.5, port 1
C5	Connects to 129.1.2.5, port 1234
C28.10/12	Connects to 129.1.28.10, port 12
C0.0.0.0/0	Enters Monitor Mode
Cwww.lantronix.com/80	Tries to connect to the Lantronix web server if the <hostname:domain> (www.lantronix.com) is configured in the DNS server database.
Autostart (Automatic Connection)	If you enable <b>Autostart</b> , the unit automatically connects to the remote IP address and remote port specified when the firmware starts.
Hostlist	If you enable this option, the device server scrolls through the hostlist until it connects to a device listed in the hostlist table. Once it connects, the unit stops trying to connect to any others.

Command String	Result if remote IP is 129.1.2.3 and remote port is 1234
	<p>If this connection fails, the unit continues to scroll through the table until it is able to connect to another IP in the hostlist.</p> <p>Hostlist supports a minimum of 1 and a maximum of 12 entries. Each entry contains the IP address and the port number.</p> <p>The hostlist is disabled for Manual and Modem Modes. The unit does not accept a data connection from a remote device when the hostlist option is enabled.</p>

Figure 7-2. Hostlist Option

```

Baudrate (9600) ?
I/F Mode (4C) ?
Flow (00) ?
Port No (10001) ?
ConnectMode (C0) ? 25
Send '+++ ' in Modem Mode (Y) ?
Show IP addr after 'RING' (Y) ?
Auto increment source port (N) ?

Hostlist :
01. IP : 172.019.205.011 Port : 00001
02. IP : 172.019.205.012 Port : 00002
03. IP : 172.019.205.013 Port : 00003

Change Hostlist ? (N) ?
Hostlist Retrycounter (3) ?
Hostlist Retrytimeout (250) ?
DisConnMode (00) ?
FlushMode (00) ?
DisConnTime (00:00) ?:
SendChar 1 (00) ?
SendChar 2 (00) ?

```

**To enable the hostlist:**

1. Enter a **Connect Mode** of 0x20 (2X), where **X** is any digit. The menu shows you a list of current entries already defined in the product.
2. To delete, modify, or add an entry, select **Yes**. If you enter an IP address of **0.0.0.0**, that entry and all others after it are deleted.
3. After completing the hostlist, repeat the previous step if necessary to edit the hostlist again.
4. For **Retrycounter**, enter the number of times the Lantronix unit should try to make a good network connection to a hostlist entry that it has successfully ARPed. The range is **1-15**, with the default set to **3**.
5. For **Retrytimeout**, enter the number of seconds the unit should wait before failing an attempted connection. The time is stored as units of milliseconds in the range of **10-65535**. The default is **250**.

**d) Datagram Type**

<b>Directed UDP</b>	<p>When selecting this option, you are prompted for the Datagram type. Enter 01 for directed or broadcast UDP. Datagrams of type 01 can be sent as a broadcast by enabling the <b>Send as Broadcast</b> option. The default is not to broadcast.</p> <p>When the UDP option is in effect, the unit never attempts to initiate a TCP connection because it uses UDP datagrams to send and receive data.</p>
---------------------	--

**e) Modem Mode**

In Modem (Emulation) Mode, the unit presents a modem interface to the attached serial device. It accepts AT-style modem commands and handles the modem signals correctly.

Normally, there is a modem connected to a local PC and a modem connected to a remote machine. A user must dial from the local PC to the remote machine, accumulating phone charges for each connection. Modem Mode allows you to replace modems with xPico 110 wired device server modules, and to use an Ethernet connection instead of a phone call. By not having to change communications applications, you avoid potentially expensive phone calls.

To select Modem Mode, set the Connect Mode to **C6** (no echo), **D6** (echo with full verbose), **D7** (echo with numeric response), **CF** (modem responses only, numeric response), or **CE** (modem responses only, full verbose).

**Note:** *If the unit is in Modem Mode, and the serial port is idle, the unit can still accept network TCP connections to the serial port if Connect Mode is set to **C6** (no echo), **D6** (echo with full verbose), **D7** (echo with numeric response), **CF** (modem responses only, numeric response), or **CE** (modem responses only, full verbose).*

<b>Without Echo</b>	<p>In Modem Mode, echo refers to the echo of all of the characters entered in command mode; it does not mean to echo data that is transferred. Quiet Mode (without echo) refers to the modem not sending an answer to the commands received (or displaying what was typed).</p>
<b>Data Echo &amp; Modem Response</b>	<p><b>Full Verbose:</b> The unit echoes modem commands and responds to a command with a message string shown in the table below.</p>

	<b>Numeric Response:</b> The unit echoes modem commands and responds to a command with a numeric response.
<b>Modem Responses Only</b>	<p><b>Full Verbose:</b> The unit does not echo modem commands and responds to a command with a message string shown in the table below.</p> <p><b>Numeric Response:</b> The unit does not echo modem commands and responds to a command with a numeric response.</p>

Table 7-7. Modem Mode Messages

Message	Meaning
<b>Full Verbose</b>	
OK	Command was executed without error.
CONNECT	A network connection has been established.
NO CARRIER	A network connection has been closed.
RING n.n.n.n.	A remote device, having IP address n.n.n.n, is connecting to this device.
<b>Numeric Response</b>	
0	OK
1	Connected
2	Ring
3	No Carrier
4	Error

Received commands must begin with the two-character sequence **AT** and be terminated with a carriage return character.

The unit ignores any character sequence received *not* starting with **AT**, and only recognizes and processes single **AT**-style commands. The unit treats compound **AT** commands as unrecognized commands.

If the **Full Verbose** option is in effect, the unit responds to an unrecognized command string that is otherwise formatted correctly (begins with **AT** and ends with carriage return) with the "OK" message and takes no further action.

If the **Numeric Response** option is in effect, the unit responds to an unrecognized command string that is otherwise formatted correctly with the "OK" message and takes no further action.

When an active connection is in effect, the unit transfers data and does not process commands received from the serial interface.

When a connection is terminated or lost, the unit reverts to command mode.

When an active connection is in effect, the unit terminates the connection if it receives the following sequence from the attached serial device:

- ◆ No serial data is received for one second.

- ◆ The character sequence +++ is received, with no more than one second between each two characters.
- ◆ No serial data is received for one second after the last + character. At this time, the unit responds affirmatively per the selected echo/response mode.
- ◆ The character string **ATH** is received, terminated with a carriage return. The unit responds affirmatively according to the selected echo/response mode and drops the network connection. The serial interface reverts to accepting command strings.

If this sequence is not followed, the unit remains in data transfer mode.

**Table 7-8. Modem Mode Commands**

Modem Mode Command	Function
ATDTx.x.x.x,pppp, ATDTx.x.x.x/pppp, or ATDTx.x.x.x:pppp	Makes a connection to an IP address (x.x.x.x) and a remote port number (pppp).
ATDTx.x.x.x	Makes a connection to an IP address (x.x.x.x) and the remote port number defined within the unit.
ATD0.0.0.0	Forces the unit into Monitor Mode if a remote IP address and port number are defined within the unit.
ATD or ATDT	Forces the unit into Monitor Mode if a remote IP address and port number are not defined within the unit.
ATDx.x.x.x	Makes a connection to an IP address (x.x.x.x) and the remote port number defined within the unit.
ATH	Hangs up the connection (Entered as +++ATH ).
ATS0=n	Enables or disables connections from the network going to the serial port. n=0 disables the ability to make a connection from the network to the serial port.  n=1-9 enables the ability to make a connection from the network to the serial port.  n>1-9 is invalid.
ATEn	Enables or disables character echo and responses. n=0 disables character echo and responses.  n=1 enables character echo and responses.
ATVn	Enables numeric response or full verbose. n=0 enables numeric response.  n=1 enables full verbose.

**Note:** The unit recognizes these AT commands as single commands such as ATE0 or ATV1; it does not recognize compound commands such as ATE0V.

## Send the Escape Sequence (+++) in Modem Mode

```
Send '+++' in Modem Mode (Y) ? _
```

Disable or enable the xPico 110 wired device server module's ability to send the escape sequence. The default is **Y** (Yes) (send the escape sequence).

## Show IP addr after 'RING'

```
Show IP addr after 'RING' (Y)
```

Disable or enable the xPico 110 wired device server module's ability to show the IP address after RING in Modem Mode. The default is **Y** (Yes), to show the IP address.

## Auto Increment Source Port

```
Auto increment source port (N) ? _
```

**Y** (Yes) auto increment the source port. The xPico 110 wired device server module increments the port number used with each new connection.

## Remote IP Address

This is the destination IP address used with an outgoing connection.

```
Remote IP Address : (000) (000) (000) (000)_
```

**Note:** This option does not display when Hostlist is enabled from the ConnectMode prompt (see [Connect Mode](#) on page 45 for more information).

## Remote Port

You must set the remote TCP port number for the unit to make outgoing connections. This parameter defines the port number on the target host to which a connection is attempted.

```
Remote Port (0) ? _
```

To connect an ASCII terminal to a host using the unit for login purposes, use the remote port number 23 (Internet standard port number for Telnet services).

**Note:** This option does not display when Hostlist is enabled from the ConnectMode prompt (see [Connect Mode](#) on page 45 for more information).

## DisConnMode

This setting determines the conditions under which the unit will cause a network connection to terminate.

DisConnMode (00) ? \_

### Notes:

- ◆ In *DisConnMode (Disconnect Mode)*, *Modem Control In drop* either drops the connection or is ignored.
- ◆ All bit positions in the table that are blank represent “don’t care” bits, for that particular option, which can be set to either a 0 or 1 value.

Table 7-9. Disconnect Mode Options

Disconnect Mode Option	7	6	5	4	3	2	1	0
Disconnect when Modem Control In is not asserted <sup>(6)</sup>	1							
Ignore Modem Control In	0							
Telnet Com Port Cntrl and terminal type setup <sup>(1)</sup>		1						
Channel (port) password <sup>(2)</sup>				1				
Hard disconnect <sup>(3)</sup>					0			
Disable hard disconnect					1			
State LED off with connection <sup>(4)</sup>								1
Disconnect with EOT (^D) <sup>(5)</sup>			1					

(1) The **Telnet Com Port Control** feature is used in conjunction with Com Port Redirector. The unit sends the **Terminal Type** upon an outgoing connection.

(2) A password is required for a connection to the serial port from the network.

(3) The TCP connection closes even if the remote site does not acknowledge the disconnection.

(4) When there is a network connection to or from the serial port, the state LED turns off instead of blinking.

(5) When **Ctrl+D** or **Hex 04** is detected, the connection is dropped. Both **Telnet Com Port Cntrl** and **Disconnect with EOT** must be enabled for **Disconnect with EOT** to function properly. **Ctrl+D** is only detected going from the serial port to the network.

(6) When **Modem Control In** transitions from a high state to a low state, the network connection to or from the serial port drops.

## Flush Mode (Buffer Flushing)

Using this parameter, you can control line handling and network buffers with connection startup and disconnect.

```
FlushMode (00) ? _
```

You can also select between two different packing algorithms.

**Note:** All bit positions in the table that are blank represent “don’t care” bits, for that particular option, which can be set to either a 0 or 1 value.

Table 7-10. Flush Mode Options

Function	7	6	5	4	3	2	1	0
<b>Input Buffer (Serial to Network)</b>								
Clear with a connection initiated from the device to the network				1				
Clear with a connection initiated from the network to the device			1					
Clear when the network connection to or from the device is disconnected		1						
<b>Output Buffer (Network to Serial)</b>								
Clear with a connection initiated from the device to the network								1
Clear with a connection initiated from the network to the device							1	
Clear when the network connection to or from the device is disconnected						1		
<b>Alternate Packing Algorithm (Pack Control)</b>								
Enable	1							

## Pack Control

The packing algorithms define how and when packets are sent to the network. The standard algorithm is optimized for applications in which the unit is used in a local environment, allowing for very small delays for single characters, while keeping the packet count low. The alternate packing algorithm minimizes the packet count on the network and is especially useful in applications in a routed Wide Area Network (WAN). Adjusting parameters in this mode can economize the network data stream.

Pack control settings are enabled in Flush Mode. Set this value to **00** if you do not need specific functions.

**Note:** All bit positions in the table that are blank represent “don’t care” bits, for that particular option, which can be set to either a 0 or 1 value.

Table 7-11. Pack Control Options

Option	7	6	5	4	3	2	1	0
<b>Packing Interval</b>								
Interval: 12ms							0	0
Interval: 52ms							0	1
Interval: 250ms							1	0
Interval: 5sec							1	1
<b>Trailing Characters</b>								
None					0	0		
One					0	1		
Two					1	0		
<b>Send Characters</b>								
2-Byte Send Character Sequence				1				
Send Immediately After Send chars			1					

### Packing Interval

Packing Interval defines how long the unit should wait before sending accumulated characters. This wait period is between successive network segments containing data. For alternate packing, the default interval is 12 ms.

### Trailing Characters

In some applications, CRC, Checksum, or other trailing characters follow the end-of-sequence character; this option helps to adapt frame transmission to the frame boundary.

### Send Characters

- ◆ If **2-Byte Send Character Sequence** is enabled, the unit interprets the sendchars as a 2-byte sequence; if this option is not enabled, the unit interprets them independently.
- ◆ If **Send Immediately After Characters** is *not* set, any characters already in the serial buffer are included in the transmission after a "transmit" condition is found. If this option is set, the unit sends immediately after recognizing the transmit condition (sendchar or timeout).

**Note:** A transmission might occur if status information needs to be exchanged or an acknowledgment needs to be sent.

## DisConnTime (Inactivity Timeout)

Use this parameter to set an inactivity timeout. The unit drops the TCP connection to the local port if there is no activity on the serial line before the set time expires. Enter time in the format mm:ss, where m is the number of minutes and s is the number of seconds.

```
DisConnTime (00:00) ?:
```

To disable the inactivity timeout, enter **00:00**. Range is 0 (disabled) to **5999** seconds (99 minutes, 59 seconds). Default is **0**.

## Send Characters

Enter up to two characters in hexadecimal representation in sendchar.

```
SendChar 1 ( 0) ? _
SendChar 2 ( 0) ? _
```

If the unit receives a character on the serial line that matches one of these characters, it sends the character immediately, along with any awaiting characters, to the TCP connection. This action minimizes the response time for specific protocol characters on the serial line (for example, ETX, EOT). Setting the first sendchar to 00 disables the recognition of the characters. Alternatively, the unit can interpret two characters as a sequence (see [Pack Control](#) on page 55).

## Telnet Terminal Type

This parameter displays only if you enabled the terminal type option in Disconnect Mode. With this option enabled, you can use the terminal name for the Telnet terminal type. Enter only one name.

With terminal type option enabled, the unit also reacts to the EOR (end of record) and binary options, useful for applications like terminal emulation to IBM hosts.

## Channel (Port) Password

This parameter appears only if the channel (port) password option is enabled in Disconnect Mode. With this option enabled, you can set a password on the serial port.

## 8. Setup Mode: Advanced Settings

### Expert Settings (Option 5)

**Note:** You can change the Enable alternate MAC setting using telnet or serial connections only. It is not available through the Web Manager.

**CAUTION:** Only an expert should change these parameters. You must definitely know the consequences the changes might have.

Figure 8-1. Expert Settings

```
TCP Keepalive time in s (1s - 65s; 0s=disable): (45) ?
ARP Cache timeout in s (0s - 600s) : (600) ?
CPU performance (0=Regular, 1=Low, 2=High): (0) ?
Disable Monitor Mode @ bootup (N) ?
HTTP Port Number : (80) ?
MTU Size (512 - 1400): (1400) ?
TCP Re-transmission Timeout (500 - 4000) (ms): (500) ?
Enable alternate MAC (N) ?
Ethernet connection type: (0) ?
```

The default settings are listed below:

<b>TCP Keepalive time in s (1s - 65s; 0s=disable)</b>	45
<b>ARP Cache timeout in s (0s - 600s; 0s=disable)</b>	600
<b>CPU Performance</b>	Regular
<b>Disable Monitor Mode @ bootup</b>	No
<b>HTTP Port Number (1-65535)</b>	80
<b>MTU Size (512 - 1400)</b>	0 (resulting in an operational value of 1400)
<b>TCP Re-transmission Timeout</b>	0 (resulting in an operational value of 500)
<b>Enable alternate MAC</b>	No (OEM use only)
<b>Ethernet connection type</b>	0 (resulting in auto-negotiation)

### TCP Keepalive time in seconds

This option allows you to change how many seconds the unit waits during a silent connection before attempting to see if the currently connected network device is still on the network. If the unit gets no response, it drops that connection.

```
TCP Keepalive time in s (1s - 65s; 0s=disable): (45)? _
```

### ARP Cache timeout in seconds

Whenever the unit communicates with another device on the network, it adds an entry into its ARP table. The ARP Cache timeout option allows you to define how many seconds (1-600) the unit will wait before timing out this table. Entering 0 disables this feature.

```
ARP Cache timeout in s (0s - 600s) : (600) ?
```

### CPU Performance

This option allows you to increase the CPU performance required to use the higher baud rates on the serial interface (460800 bps and 921600 bps). The standard CPU performance mode supports up to 230400 bps.

```
CPU performance (0=Regular, 1=Low, 2=High): (0) ?
```

#### Notes:

- ◆ If a baud rate of 460 Kbps or 920 Kbps is set and the high performance mode is disabled, the operation of the serial channel would be out of the specified error tolerance, thereby leading to inconsistent speed settings on the two ends of the serial channel.
- ◆ *Increasing CPU clock speed consumes more power and generates more heat. This reduces the maximum operating temperature specification. See the appropriate product brief for details.*

### Disable Monitor Mode at bootup

This option allows you to disable all entries into Monitor Mode during startup, except for the 'xxx' sequence. This prevents entry using **yyy**, **zzz**, **xx1**, and **yy1** key sequences (only during the bootup sequence). The default for Monitor Mode at bootup is **N** (No). (See [11 Monitor Mode.](#))

```
Disable Monitor Mode @ bootup (N) ? _
```

### HTTP Port Number

This option allows the configuration of the web server port number. The valid range is 1-65535. The default HTTP port number is 80.

```
HTTP Port Number : (80) ? _
```

## MTU Size

The Maximum Transmission Unit (MTU) is the largest physical packet size a network can transmit for TCP and UDP. Enter between **512** and **1400** bytes. The default is **1400** bytes.

```
MTU Size (512 - 1400): (1400) ? _
```

## TCP Re-Transmission Timeout

The TCP Re-Transmission Timeout is the interval to wait for acknowledgement of transmitted TCP segments before re-transmitting them. Enter between **500** and **4000** ms. The default is **500** ms.

```
TCP Re-transmission Timeout (500 - 4000) (ms): (500) ?
```

## Enable alternate MAC

If necessary, enable the alternate MAC address (if specified in the OEM setup record).

```
Enable alternate MAC (N) ? _
```

## Ethernet Connection Type

The xPico 110 wired device server module allows for the Ethernet speed and duplex to be manually configured. Enter **0** for auto-negotiation (default). To select the speed and duplex, enter one of the following: **2** (10 MB/half duplex), **3** (10 MB/full duplex), **4** (100 MB/half duplex), or **5** (100 MB/full duplex).

```
Ethernet connection type: (0) ? _
```

## Security Settings (Option 6)

**Note:** You can change security settings by means of Telnet or serial connections only, not on the Web Manager. We recommend that you set security over the dedicated network or over the serial setup to prevent eavesdropping.

**CAUTION:** Disabling both Telnet Setup and Port 77FE will prevent users from accessing the setup menu from the network. Disabling Port 77FE also disables the Web from configuring the device.

Select **7** to configure security settings.

Figure 8-2. Security Settings

```
Disable SNMP (N) ?
SNMP Community Name (public):
Disable Telnet Setup (N) ?
```

```

Disable TFTP Firmware Update (N) ?
Disable Port 77FEh (N) ?
77FEh Access Mode (0=Read & Write, 1=Read Only): (0) ? _
Disable Web Server (N) ?
Disable Web Setup (N) ?
Disable ECHO ports (Y) ?
Enable Encryption (N) ?
Enable Enhanced Password (N) ?
Disable Port 77F0h (N) ?

```

### Disable SNMP

This setting allows you to disable the SNMP protocol on the unit for security reasons.

```

Disable SNMP (N) ? _

```

### SNMP Community Name

The SNMP Community Name is a required field for NMS to read or write to a device. Enter a string of 1 to 13 characters.

```

SNMP Community Name (public): _

```

The default entry is **public**. The current value is displayed in parentheses.

### Disable Telnet Setup

**Note:** If you choose to disable this option, keep in mind that disabling both Telnet Setup and Port 77FE will prevent users from accessing the setup menu from the network.

This setting defaults to the **N** (No) option. The **Y** (Yes) option disables access to Setup Mode by Telnet (port 9999). It only allows access locally using the web pages and the unit serial port.

```

Disable Telnet Setup (N) ? _

```

### Disable TFTP Firmware Upgrade

This setting defaults to the **N** (No) option. The **Y** (Yes) option disables the use of TFTP to perform network firmware upgrades. With this option, you can download firmware upgrades over the serial port using DeviceInstaller's Recover Firmware procedure. (See [10 Firmware Upgrades](#).)

```

Disable TFTP Firmware Update (N) : _

```

## Disable Port 77FE (Hex)

**Note:** If you choose to disable this option, keep in mind that disabling both Telnet Setup and Port 77FE will prevent users from accessing the setup menu from the network.

Port 77FE is a setting that allows DeviceInstaller, Web Manager, and custom programs to configure the unit remotely. You may wish to disable this capability for security purposes.

```
Disable Port 77FEh (N) ? _
```

The default setting is the **N** (No) option, which enables remote configuration. You can configure the unit by using DeviceInstaller, web pages, Telnet, or serial configuration.

The **Y** (Yes) option disables remote configuration and web sites.

**Note:** The **Y** (Yes) option disables many of the GUI tools for configuring the unit, including the embedded Web Manager tool.

## 77FEh Access Mode

Configuring this setting is available if port 77FE is enabled. This option will not be listed if port 77FE is disabled.

Set 0 for Read & Write mode, and 1 for Read Only mode. Default value of this setting is Read-Write(0).

If access mode is Read-only, then read operation can be done through port 77FE, if Read-Write access is selected, then both read and write of data can be done through port 77FE.

```
77FEh Access Mode (0=Read & Write, 1=Read Only): (0) ? _
```

## Disable Web Server

This setting defaults to the **N** (option). The **Y** (Yes) option disables the web server.

```
Disable Web Server (N) ? _
```

## Disable Web Setup

The **Y** (Yes) option disables configuration using the Web Manager. This setting defaults to the **N** (option).

```
Disable Web Setup (N) ? _
```

## Disable ECHO Ports

This setting controls whether port 7 echoes characters it receives.

```
Disable ECHO ports (Y) ? _
```



- ♦ Lantronix Secure Com Port Redirector provides an encrypted connection from Windows-based applications to the xPico 110 wired device server module. Information about SCPR is at [www.lantronix.com/device-networking/utilities-tools/scpr](http://www.lantronix.com/device-networking/utilities-tools/scpr). A 30-day trial version of SCPR is available.

**Note:** Developers can license the Lantronix Encryption Library Suite. See [www.lantronix.com/device-networking/utilities-tools](http://www.lantronix.com/device-networking/utilities-tools).

### Enable Enhanced Password

The Enhanced Password setting allows you to set a password of up to 16 characters for protecting Telnet and Web Page access. We recommend that you select the **Y** (Yes) option and enable the enhanced password setting.

Avoid using either the 4 character basic password setting or no password at all as they are not secure options.

```
Enable Enhanced Password (Y) ? _
```

### Disable Port 77F0 (Hex)

Port 77F0 is a setting that allows a custom application to query or set the eight xPico 110 wired device server module configurable pins when they are functioning as general purpose I/O (GPIO). You may want to disable this capability for security purposes. The default setting is the **N** (No) option, which enables GPIO control. The **Y** (Yes) option disables the GPIO control interface.

```
Disable Port 77F0h ? _
```

## Default Settings (Option 7)

Select **7** to reset the unit's Channel 1 and Channel 2 configuration and expert settings to the default settings. The server configuration settings for IP address, gateway IP address, and netmask remain unchanged. The configurable pins' settings also remain unchanged. The specific settings that this option changes are listed below:

### Channel 1 and Channel 2 Configuration Defaults

<b>Baudrate</b>	9600
<b>I/F Mode</b>	4C (1 stop bit, no parity, 8 bit, RS-232C)
<b>Flow</b>	00 <i>Note: Flow control option only available for Channel 1 configuration.</i>
<b>Port number</b>	10001 for Channel 1 10002 for Channel 2
<b>Connect Mode</b>	C0 (always accept incoming connection; no active connection startup)

<b>Send '+++'</b> in Modem Mode	Enabled
<b>Show IP addr</b> after 'RING'	Enabled
<b>Auto increment</b> source port	Disable
<b>Hostlist</b> retry counter	3
<b>Hostlist</b> retry timeout	250 (msec)
<b>Start character</b> for serial channel 1 (or 2)	0x0D (CR)
<b>All other</b> parameters	0

### Expert Settings Defaults

<b>TCP</b> Keepalive time in s	45
<b>ARP</b> Cache timeout in s	600
<b>CPU</b> Performance	0 (Regular)
<b>Monitor</b> Mode @ bootup	Enabled
<b>HTTP</b> Port Number (1-65535)	80
<b>MTU</b> Size (512 – 1400)	0 (resulting in an operational value of 1400)
<b>TCP</b> Re-transmission timeout (ms)	500 (msec)
<b>Alternate</b> MAC	Disabled (for OEM use only)
<b>Ethernet</b> Connection Type	0 (auto-negotiate)

### Security Settings Defaults

<b>Disable</b> SNMP	No
<b>SNMP</b> community name	public
<b>Disable</b> Telnet setup	No
<b>Disable</b> TFTP Firmware Update	No
<b>Disable</b> Port 77FEh	No
<b>77FEh</b> Access Mode	0 (Read & Write)
<b>Disable</b> Web Server	No
<b>Disable</b> Web Setup	No
<b>Disable</b> ECHO ports	Yes
<b>Enable</b> Encryption	No
<b>Enable</b> Enhanced Password	No
<b>Disable</b> Port 77F0h	No

## 9. GPIO Interface

### Configurable Pins

The xPico 110 wired device server module has eight pins (CP1-8) that you can configure for General Purpose I/O (GPIO).

**Note:** You can also configure the pins for serial port control lines, such as hardware control, modem control (CTS, RTS, DTR, and DCD), and diagnostic outputs to LED, using DeviceInstaller.

You can use these GPIO pins to control devices such as relays, servers, lights, monitor switches, sensors, and even processes such as data transfer.

You can set the functions for the eight pins independently and in any combination. The initial directions (input/output) and active levels (active low or high) at boot up can also be configured through 77FE, for example, by using DeviceInstaller.

This chapter describes how the directions, active levels, and states can be dynamically controlled and probed through special port 77F0.

The configurable pins default configuration is:

Function: General Purpose Input

Active Level: Active Low

#### Features

- ◆ TCP and UDP can be used.
- ◆ The protocol supports up to 32 GPIO for future products.
- ◆ Function configuration can be retrieved.
- ◆ Input or output selection can be retrieved and controlled.
- ◆ Active low or high selection can be retrieved and controlled.
- ◆ Active or inactive selection can be retrieved and controlled.
- ◆ 77F0 can be disabled.

Every change of state (active/inactive) requires a command over TCP or UDP, and thus is not very fast. If you use this port for data transfer, the throughput is low, usually up to 1 Kbps.

## Control Protocol

The GPIO control protocol is a simple, proprietary protocol.

### Guidelines

The GPIO control protocol is described from the PC side. Send means from PC to xPico 110 wired device server module. Response comes from xPico 110 wired device server module to PC.

The protocol allows for control of up to 32 GPIOs. How many are actually available depends on the product. xPico 110 wired device server module has only eight.

The parameters are four bytes long and represent GPIOs 0-31, with GPIO0 in bit 0 of the first byte (Little Endian). Parameter bits for configurable pins not configured as GPIOs are undefined for **Get** commands and ignored on **Set** commands.

Every command consists of nine bytes: one command type of one byte and two parameters of four bytes each.

Command			Parameter 1			Parameter 2		
0	1	2	3	4	5	6	7	8

On some commands, one or all parameters are ignored.

For UDP, command type and parameters need to be in the same datagram.

Responses to valid commands are always five bytes long, consisting of the returned command byte and as parameters in the current or updated values. In case of an invalid command, only one byte with value 0FFh is returned.

Command	Parameter 1			
0	1	2	3	4

When sending a command (TCP and UDP), wait for the response before sending the next command.

## Commands

### Byte 0 Command Types

**10h**    **Get functions**

**11h**    **Get directions** (input or output)

**12h**    **Get active levels** (high active or low active)

**13h**    **Get current states** (active or not active)

**19h**    **Set directions**

**1Ah**    **Set active levels**

**1Bh**    **Set current states**

There is no **Set functions** command. Since the pin's function depends on the hardware in which the xPico 110 wired device server module is embedded, that configuration is only allowed using 77FE. Settings changed by any of the **Set** commands are not stored and are lost when the unit is powered down or rebooted.

**Command 10h, Get Functions****Send:**

No parameters

**Response:**

1 parameter

Bytes 1-4: Functions

Bit X        1 means general purpose I/O available to the user.

0 means dedicated function (e.g., serial flow control, diagnostics) for configurable pin X.

**Command 11h, Get Directions****Send:**

No parameters

**Response:**

1 parameter

Bytes 1-4: Directions

Bit X        1 means GPIO X is an output.

0 means it is an input.

**Command 12h, Get Active Levels****Send:**

No parameters

**Response:**

1 parameter

Bytes 1-4: Active levels

Bit X        1 means GPIO X is active low (0V when active, 3.3V when inactive).

0 means it is active high (3.3V when active, 0V when inactive).

**Command 13h, Get Current States****Send:**

No parameters

**Response:**

1 parameter

Bytes 1-4: States

Bit X        1 means GPIO X is active

0 means it is inactive.

**Command 19h, Set Directions****Send:**

2 parameters

Bytes 1-4: Mask

Bit X        1 means the direction for GPIO X will be updated with the value in the second parameter.

0 means the direction for that GPIO will not change.

Bytes 5-8: New Directions

Bit X        1 means GPIO X will become an output.

0 means it will become an input.

**Response:**

1 parameter

Bytes 1-4: The updated directions

**Command 1Ah, Set Active Levels****Send:**

2 parameters

Bytes 1-4: Mask

Bit X        1 means the direction for GPIO X will be updated with the value in the second parameter.

0 means the active type for that GPIO will not change.

Bytes 5-8: New Active Levels

Bit X        1 means GPIO X will become active low.

0 means it will become active high.

**Response:**

1 parameter

Bytes 1-4: Updated active levels

**Command 1Bh, Set States****Send:**

2 parameters

Bytes 1-4: Mask

Bit X        1 means the state for GPIO X will be updated with the value in the second parameter.

0 means the state for that GPIO will not change.

Bytes 5-8: New States

Bit X        1 means GPIO X will become active.

0 means it will become inactive.

**Response:**

1 parameter

Bytes 1-4: Updated states

## Examples

### Example 1: PC sends command 10h to find out which configurable pins are available as GPIO.

PC -> xPico 110: 10h, 00h, 00h, 00h, 00h, 00h, 00h, 00h  
 xPico 110 -> PC: 10h, 03h, 00h, 00h, 00h

#### Command details:

10h = command 10h  
 00h, 00h, 00h, 00h = ignored  
 00h, 00h, 00h, 00h = ignored

#### Response details:

10h = response to command 10h  
 03h, 00h, 00h, 00h =

bits 0 and 1 are 1 → CP1 and CP2 are configured as GPIOs.  
 bit 2 is 0 → CP3 is configured as either serial control or diagnostics.  
 The other bits are ignored because there are only eight configurable pins on the xPico 110.

### Example 2: PC sends command 1Bh to change the current states of GPIO 0 and 1.

PC -> xPico 110: 1Bh, 01h, 00h, 00h, 00h, 00h, 00h, 00h, 00h  
 xPico 110 -> PC: 1Bh, 05h, 00h, 00h, 00h

#### Command details:

1Bh = command 1Bh  
 01h, 00h, 00h, 00h = the mask that determines which GPIOs will be changed.

bit 0 is 1 → GPIO0 will be changed.  
 bit 1 is 0 → GPIO1 will remain the same.

00h, 00h, 00h, 00h = the new states

bit 0 is 0 → GPIO0 will become 0.  
 bit 1 is ignored since it is masked out.

#### Response details:

1Bh = response to command 1Bh  
 05h, 00h, 00h, 00h =

bit 0 is 1 → GPIO0 = 1  
 bit 1 is 0 → GPIO1 = 0  
 bit 2 is 1 → GPIO2 = 1  
 The other bits are ignored because there are only eight configurable pins on the xPico 110.

# 10. Firmware Upgrades

## Obtaining Firmware

You can obtain the most up-to-date firmware and release notes for the unit from the Lantronix web site ([www.lantronix.com/support/downloads](http://www.lantronix.com/support/downloads)) or by using anonymous FTP ([ftp.lantronix.com/pub](ftp://lantronix.com/pub)).

## Reloading Firmware

There are several ways to update the unit's internal operational code (\*.ROM): using DeviceInstaller (the preferred way), using TFTP, or using the serial port. You can also update the unit's internal Web interface (\*.COB) using TFTP or DeviceInstaller.

Here are typical names for those files. Check the Lantronix web site for the latest versions and release notes.

Table 10-1. Firmware Files

ROM File	COB
xpico110_61105.rom	xpico110_webm_20011.cob

Please refer to the DeviceInstaller online Help for information about reloading firmware using DeviceInstaller. The other methods are discussed below.

### Using TFTP: Graphical User Interface


#### To download new firmware from a computer:

1. Use a TFTP client to put a binary file to the unit (\*.ROM to upgrade the unit's internal operational code and \*.COB to upgrade its internal web interface).

**Note:** TFTP requires the **.rom** (binary) version of the unit's internal operational code.

2. In the **Host** field, enter the IP address of the unit being upgraded.
3. In the **Port** field, enter **69**.
4. Enter the full path of the firmware file in the **Local File** field.
5. In the **Remote File** field, enter the **current** internal operational code or **WEB1** to **WEB6** for the internal web interface.

Figure 10-1. TFTP Window

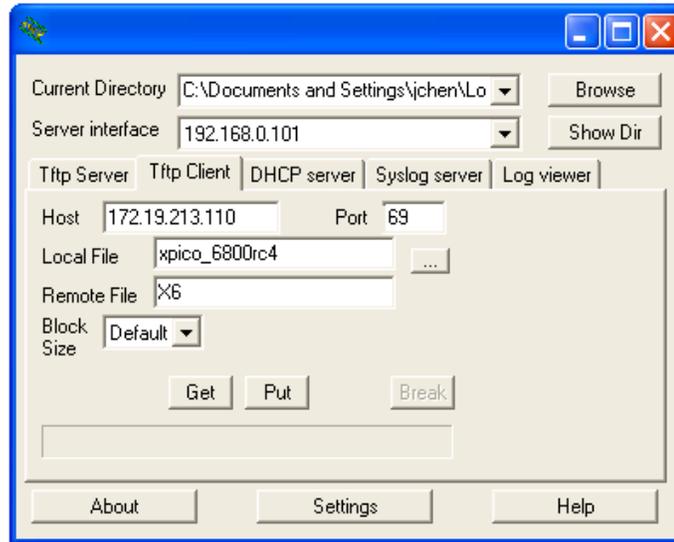

6. Click the **Put** button to transfer the file to the unit. The unit performs a power reset after the firmware has been loaded and stored.

After the firmware has been loaded and stored, which takes approximately 8 seconds to complete, the unit performs a power reset.

### Using TFTP: Command Line Interface

#### *To download new firmware from a computer:*

1. Enter the following from a TFTP command line interface:

```
tftp -i <ip address> put <local filename> <destination file name>
```

The following examples demonstrate the TFTP command sequence to download the .rom file and the .cob file:

```
tftp -i 192.168.1.111 put xpico110_61105 6X
tftp -i 192.168.1.111 put xpico110_webm_20011.cob WEB1
```

## Recovering the Firmware Using the Serial Port and DeviceInstaller

If for some reason the firmware is damaged, you can recover the firmware file by using DeviceInstaller to download the \*.ROM file over the serial port.

### *To recover firmware:*

1. Start the DeviceInstaller® application. If your PC has more than one network adapter, a message displays. Select an adapter and click **OK**.
2. From the **Tools** menu, select **Advanced/Recover Firmware**. The Serial Port Firmware Upgrade window displays.
3. For **Port on PC**, enter the COM port on the PC that is connected to the serial port of the Lantronix unit.
4. For **Device Model**, be sure the appropriate xPico 110 module is shown (xPico 110).
5. For **Firmware File**, click the **Browse** button and go to the location where the firmware file resides.

**Note:** Make sure the xPico 110 wired device server module on which you are recovering firmware is connected to this selected port on your PC.

6. Click **OK** to download the file.
7. When prompted, reset the device. Status messages and a progress bar at the bottom of the screen show the progress of the file transfer. When the file transfer completes, the message “**Successful, Click OK to Close**” appears.
8. Click the **OK** button to complete this procedure.

**Note** For more information, see *Recovering Firmware in the DeviceInstaller online Help*.

## 11. Monitor Mode

Monitor Mode is a command-line interface used for diagnostic purposes. There are two ways to enter Monitor Mode: locally using the serial port or remotely using the network.

### Entering Monitor Mode Using the Serial Port

*To enter Monitor Mode locally:*

1. Follow the same steps used for setting the serial configuration parameters (see [Serial Port](#) on page 39).
2. Instead of typing three **x** keys, however:
3. Type **zzz** (or **xx1**) to enter Monitor Mode with network connections.
4. Type **yyy** (or **yy1**) to enter Monitor Mode without network connections.

A **0>** prompt indicates that you have successfully entered Monitor Mode.

### Entering Monitor Mode Using the Network Port

**To enter Monitor Mode using a Telnet connection:**

1. Establish a Telnet session to the configuration port (9999). The following appears:

```
MAC address DC82F6000119

Software version V6.11.0.5RC1 (161006) XPICO-SMT

AES library version 1.8.2.1

Press Enter for Setup Mode
```

2. Type **M** (upper case).

A **0>** prompt indicates that you have successfully entered Monitor Mode.

#### Monitor Mode Commands

The following commands are available in Monitor Mode. Many commands have an IP address as an optional parameter (xxx.xxx.xxx.xxx). If you enter the IP address, the command is applied to another unit with that IP address. If you do not enter the IP address, the command is executed locally.

**Note:** All commands must be in capital letters. Responses to some of the commands are in Intel Hex format.

Table 11-1. Monitor Mode Commands

Command	Command Name	Function
<b>VS x.x.x.x</b>	Version	Queries software header record (16 bytes) of unit with IP address x.x.x.x.
<b>GC x.x.x.x</b>	Get Configuration	Gets configuration of unit with IP address x.x.x.x as hex records (120 bytes).
<b>SC x.x.x.x</b>	Send Configuration	Sets configuration of unit with IP address x.x.x.x from hex records.
<b>PI x.x.x.x</b>	Ping	Pings unit with IP address x.x.x.x to check device status.
<b>AT</b>	ARP Table	Shows the unit's ARP table entries.
<b>TT</b>	TCP Connection Table	Shows all incoming and outgoing TCP connections.
<b>NC</b>	Network Connection	Shows the unit's IP address, gateway, subnet mask, and DNS server.
<b>RS</b>	Reset	Resets the unit's power.
<b>QU</b>	Quit	Exits diagnostics mode.
<b>G0, G1, ..., Ge, Gf</b>	Get configuration from memory page	Gets a memory page of configuration information from the device.
<b>S0, S1, ..., Se, Sf</b>	Set configuration to memory page	Sets a memory page of configuration information on the device.
<b>GM</b>	Get MAC address	Shows the unit's 6-byte MAC address.
<b>SS</b>	Set Security record	Sets the Security record without the encryption key and length parameters. The entire record must still be written, but the encryption-specific bytes do not need to be provided (they can be null since they are not overwritten).
<b>SA</b>	Scan	Initiates a wireless scan if the wireless interface is enabled. Reports any stations found, including BSSID, SSID, and RSSI. If SA is followed by a string, the string is used to filter SSIDs before reporting. If the BSS does not broadcast its SSID, only the BSSID and RSSI are returned.
<b>NS</b>	Network Status	Reports the network interfaces' statuses. Includes potentially negotiated parameters like speed/duplex for Ethernet or BSSID, encryption, authentication for wireless interfaces.
<b>co</b>	Set IP address, hostbits, gateway, and DNS server IP	<b>Example:</b> co 192.168.0.10 8 192.168.0.1 10001 192.168.1.10 with 192.168.0.10 = IP address of the xPico 110 8 = number of hostbits

Command	Command Name	Function
		192.168.0.1 = gateway IP address 10001 = port number of the xPico 110 Channel 1 192.168.1.10 = IP address of the DNS Server The xPico 110 wired device server module stores the setup and performs a reset. It sends an <b>X</b> before the reset if the command was <b>OK</b> .
<b>VN</b>	Query full firmware version	This command queries and displays full firmware version in readable string format.
<b>WC</b>	Flash write count	This command shows serial flash write counts, valid on serial flash products.

**Note:** Entering any of the commands listed above generates one of the following command response codes:

Table 11-2. Command Response Codes

Response	Meaning
0>	OK; no error
1>	No answer from remote device
2>	Cannot reach remote device or no answer
8>	Wrong parameter(s)
9>	Invalid command

## 12. Troubleshooting

This chapter discusses how you can diagnose and fix errors quickly without having to contact a dealer or Lantronix. It helps to connect a terminal to the serial port while diagnosing an error to view summary messages that may display. When troubleshooting, always ensure that the physical connections (power cable, network cable, and serial cable) are secure.

**Note:** Some unexplained errors might be caused by duplicate IP addresses on the network. Make sure that your unit's IP address is unique.

When troubleshooting the following problems, make sure that the xPico 110 wired device server module is powered up. Confirm that you are using a good network connection.

### Problems and Error Messages

Problem/Message	Reason	Solution
When you issue the <b>ARP -S</b> command in Windows, the "ARP entry addition failed: 5" message displays.	Your currently logged-in user does not have the correct rights to use this command on this PC.	Have someone from your IT department log you in with sufficient rights.
When you attempt to assign an IP address to the unit by the ARP method, the "Press Enter to go into Setup Mode" error "(described below) message displays. Now when you Telnet to the device server, the connection fails.	When you Telnet to port 1 on the device server, you are only assigning a temporary IP address. When you Telnet into port 9999 and do not press <b>Enter</b> quickly, the device server reboots, causing it to lose the IP address.	Telnet back to Port 1. Wait for it to fail, then Telnet to port 9999 again. Make sure you press <b>Enter</b> quickly.
When you Telnet to port 9999, the "Press Enter to go into Setup Mode" message displays. However, nothing happens when you press <b>Enter</b> , or your connection is closed.	You did not press <b>Enter</b> quickly enough. You only have 5 seconds to press <b>Enter</b> before the connection is closed.	Telnet to port 9999 again, but press <b>Enter</b> as soon as you see the "Press Enter to go into Setup Mode" message.
When you Telnet to port 1 to assign an IP address to the device server, the Telnet window does not respond for a long time.	You may have entered the Ethernet address incorrectly with the ARP command.	Confirm that the Ethernet address that you entered with the ARP command is correct. The Ethernet address may only include numbers 0-9 and letters A-F. In Windows and usually in Unix, the segments of the Ethernet address are separated by dashes. In some forms of Unix, the Ethernet address is segmented with colons.

Problem/Message	Reason	Solution
	The IP address you are trying to assign is not on your logical subnet.	Confirm that your PC has an IP address and that it is in the same logical subnet that you are trying to assign to the device server.
	The device server may not be plugged into the network properly.	Make sure that the Link LED is lit. If the Link LED is not lit, then the device server is not properly plugged into the network.
When you try to assign an IP with DeviceInstaller, you get the following :  "No response from device! Verify the IP, Hardware Address and Network Class. Please try again."	The cause is most likely one of the following:  The hardware address you specified is incorrect.  The IP address you are trying to assign is not a valid IP for your logical subnet.  You did not choose the correct subnet mask.	Double-check the parameters that you specified.  <b>Note:</b> You cannot assign an IP address to a device server through a router.
The device server is not communicating with the serial device to which it is attached.	The most likely reason is the wrong serial settings were chosen.	The serial settings for the serial device and the device server must match. The default serial settings for the device server are RS-232, 9600 baud, 8 character bits, no parity, 1 stop bit, no flow control.
When you try to enter the setup mode on the device server using the serial port, you get no response.	The issue is most likely something covered in the previous problem, or possibly, you have <b>Caps Lock</b> on.	Double-check everything in the problem above. Confirm that <b>Caps Lock</b> is not on.
You can ping the device server, but not Telnet to the device server on port 9999.	There may be an IP address conflict on your network  You are not Telnetting to port 9999.  The Telnet configuration port (9999) is disabled within the device server security settings.	Turn the device server off and then issue the following commands at the DOS prompt of your computer:  ARP -D X.X.X.X (X.X.X.X is the IP of the device server).  PING X.X.X.X (X.X.X.X is the IP of the device server).  If you get a response, then there is a duplicate IP address on the network. If you do not get a response, use the serial port to verify that Telnet is not disabled.

Problem/Message	Reason	Solution
<p>The device server appears to be set up correctly, but you are not communicating with your device attached to the device server across the network.</p>	<p>If you are sure that the serial port setting is correct, then you may not be connecting to the correct socket of the device server.</p> <p>Another possibility is that the device server is not set up correctly to make a good socket connection to the network.</p>	<p>You can check to see whether there is a socket connection to or from the device server by checking the state of CPx, if one of the CPs has been configured for Serial Channel Status LED functionality.</p> <p>If the state of CPx is blinking consistently, then there is a good socket connection.</p> <p>If the state of CPx is low, use the Connect Mode option C0 for making a connection to the device server from the network. Use Connect Mode option C1 or C5 for a connection to the network from the device server. See the full list of Connect Mode options in <a href="#">Connect Mode</a>.</p>
<p>When connecting to the Web Manager within the device server, the "No Connection With The Device Server" message displays.</p>	<p>Your computer is not able to connect to port 30718 (77FEh) on the device server.</p>	<p>Make sure that port 30718 (77FEh) is not blocked with any router that you are using on the network. Also, make sure that port 77FEh is not disabled within the Security settings of the device server.</p>

## ***A: Technical Support***

Lantronix offers many resources to support our customers and products at <http://www.lantronix.com/support>. For instance, ask a question, find firmware downloads, access the FTP site and search through tutorials, FAQs, bulletins, warranty information, extended support services, and product documentation.

To contact technical support or sales, look up your local office at <http://www.lantronix.com/about/contact.html>. When you report a problem, please provide the following information:

- ◆ Your name, company name, address, and phone number
- ◆ Lantronix product and model number
- ◆ Lantronix MAC number or serial number
- ◆ Firmware version and current configuration
- ◆ Description of the problem
- ◆ Status of the unit when the problem occurred (please try to include information on user and network activity at the time of the problem).

## B: Binary to Hexadecimal Conversions

Many of the unit's configuration procedures require assembling a series of options (represented as bits) into a complete command (represented as a byte). Convert the resulting binary value to a hexadecimal representation.

### Converting Binary to Hexadecimal

Following are two simple ways to convert binary numbers to hexadecimal.

#### Conversion Table


Hexadecimal digits have values ranging from 0 to F, which are represented as 0-9, A (for 10), B (for 11), etc. To convert a binary value (for example, 0100 1100) to a hexadecimal representation, the upper and lower four bits are treated separately, resulting in a two-digit hexadecimal number (in this case, 4C). Use the following table to convert values from binary to hexadecimal.

Decimal	Binary	Hex
0	0000	0
1	0001	1
2	0010	2
3	0011	3
4	0100	4
5	0101	5
6	0110	6
7	0111	7
8	1000	8
9	1001	9
10	1010	A
11	1011	B
12	1100	C
13	1101	D
14	1110	E
15	1111	F

#### Scientific Calculator

Another simple way to convert binary to hexadecimal is to use a scientific calculator, such as the one available on Windows' operating systems. For example:

1. On the Windows' Start menu, click **Programs**→**Accessories**→**Calculator**.
2. On the **View** menu, select **Scientific**. The scientific calculator displays.
3. Select **Bin** (Binary), and type the number to convert.

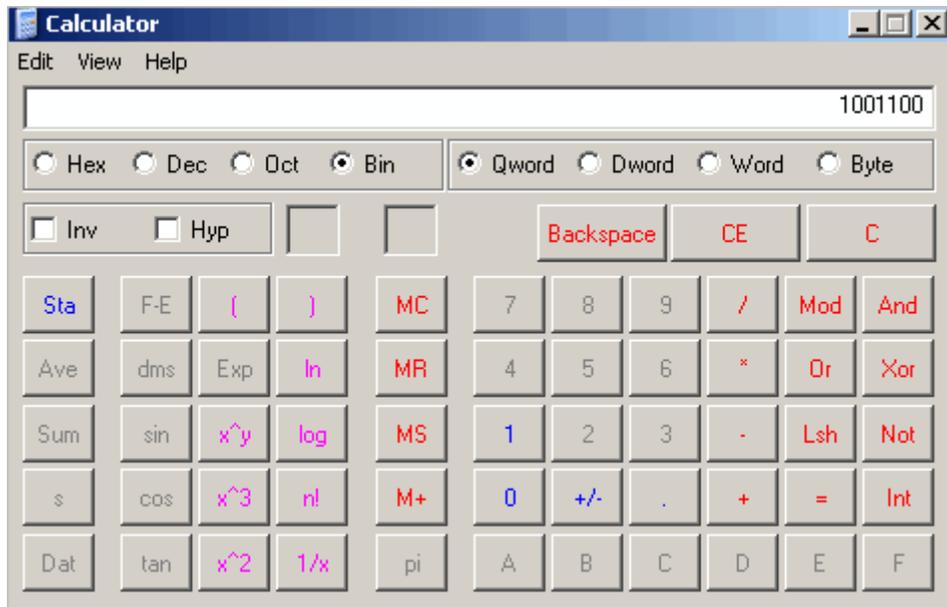

4. Click Hex. The hexadecimal value displays.

## **C: Compliance**

### **RoHS, REACH and WEEE Compliance Statement**

Please visit <http://www.lantronix.com/legal/rohs/> for Lantronix's statement about RoHS, REACH and WEEE compliance.