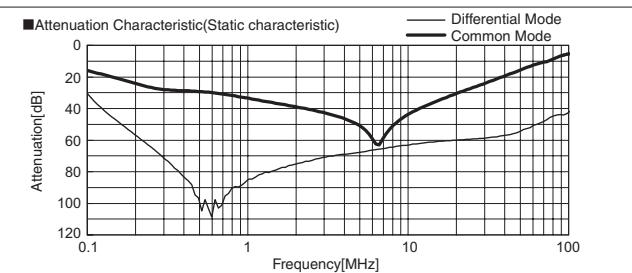
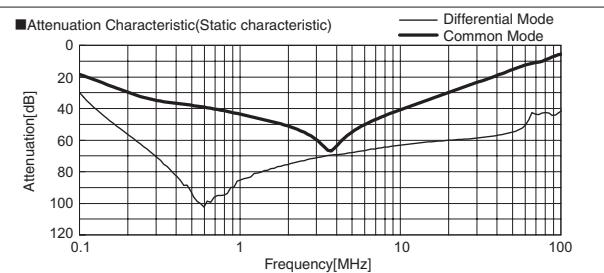



FTA-40-223




FTA-40-683



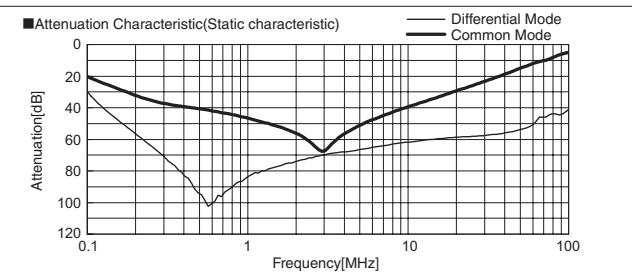
FTA-40-104




FTA-40-335

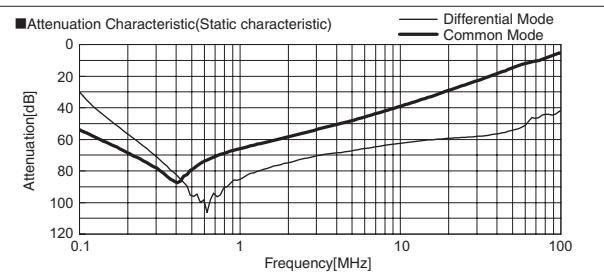


FTA-50-223

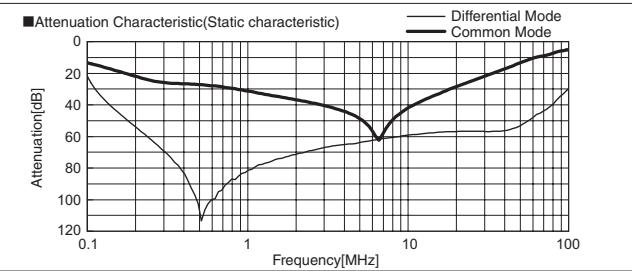


FTA-50-683

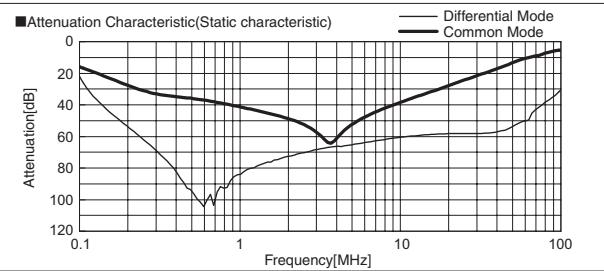


FTA-50-104

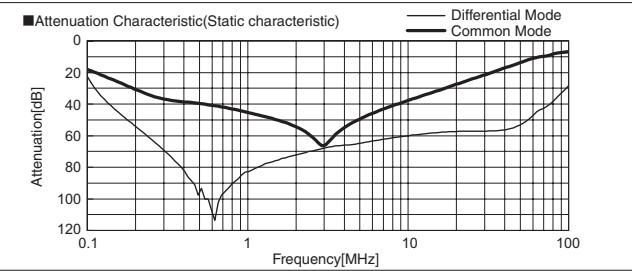


FTA-50-335

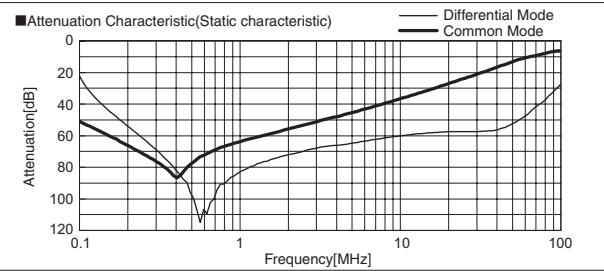


FTA-60-223

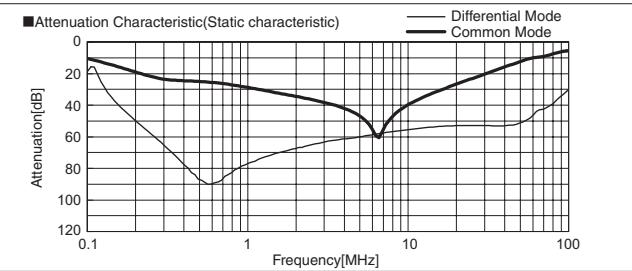


FTA-60-683









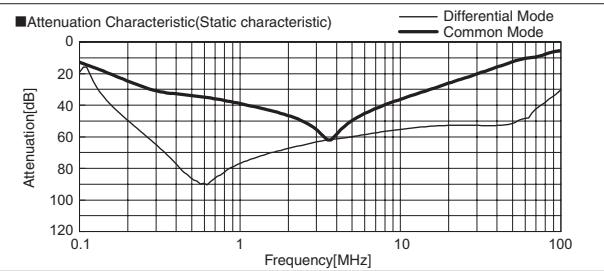














FTA-60-104










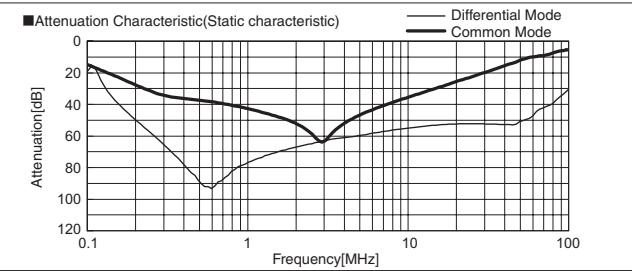











FTA-60-335












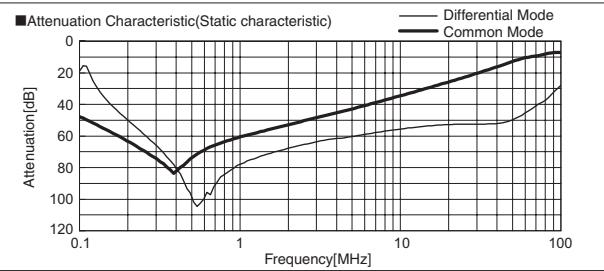


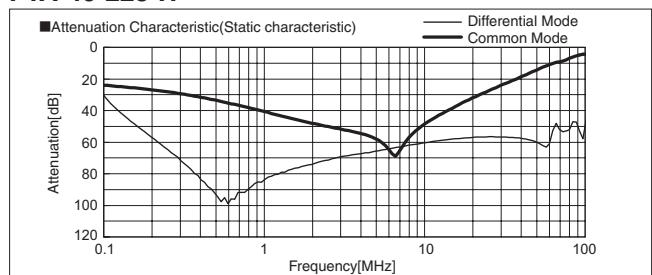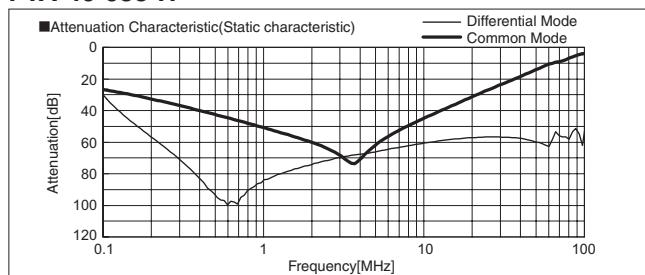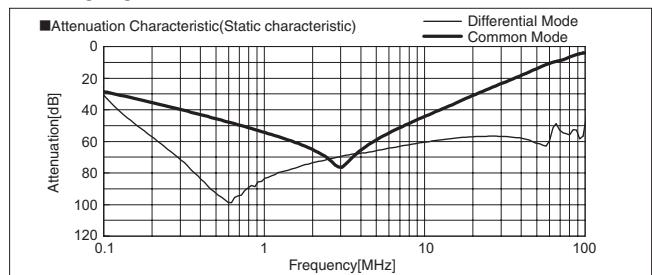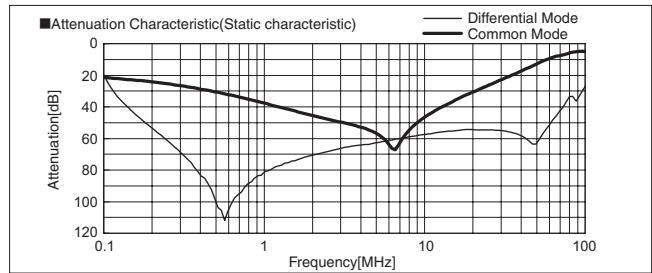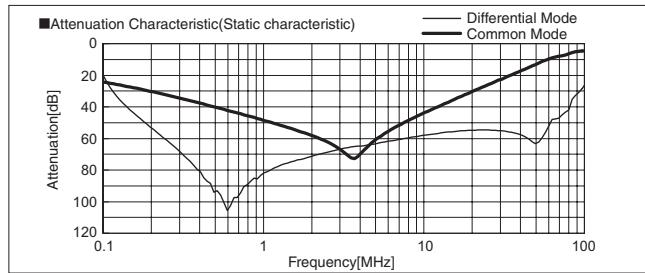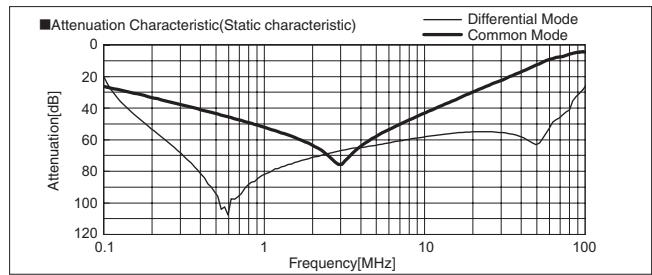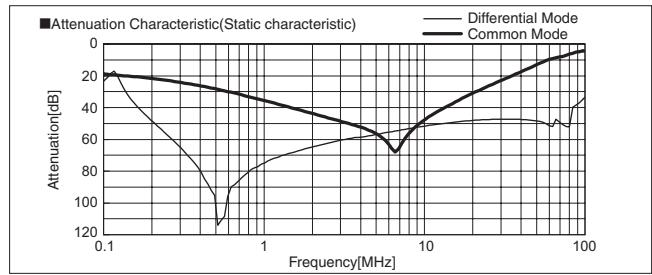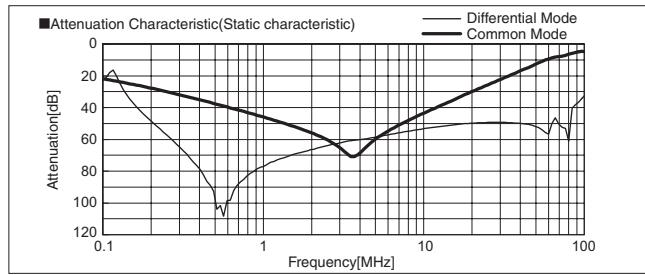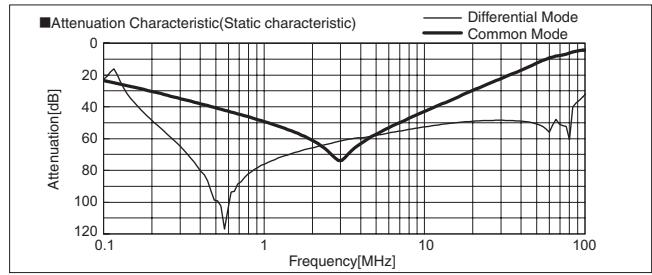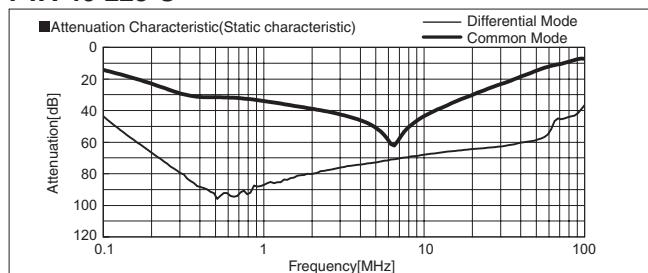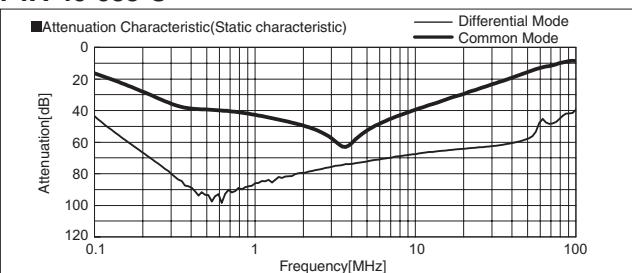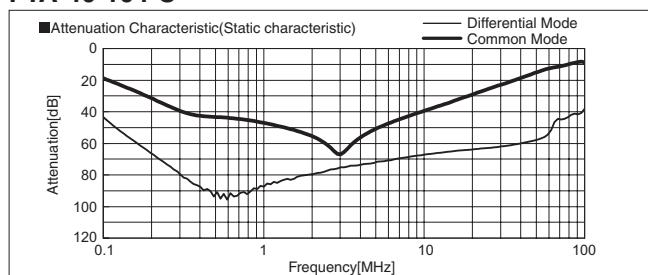
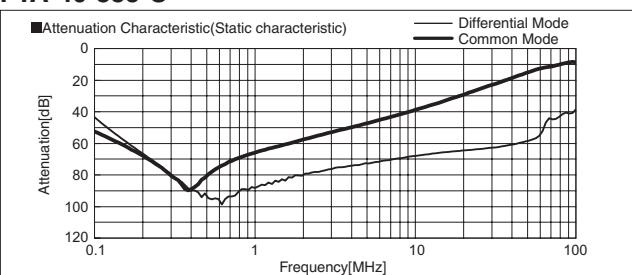
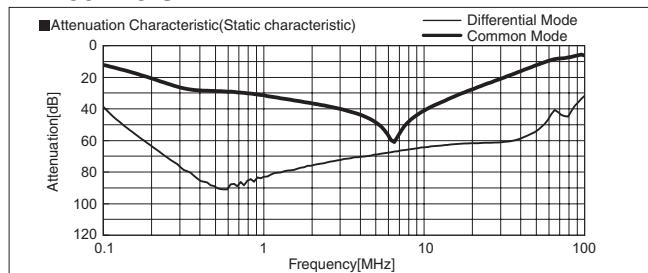
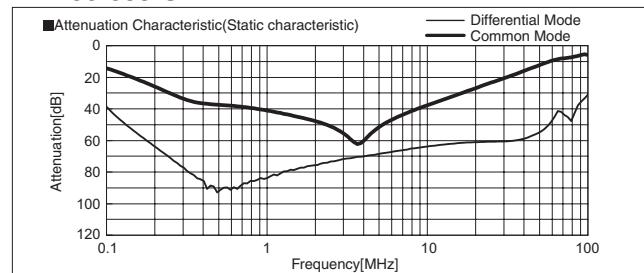
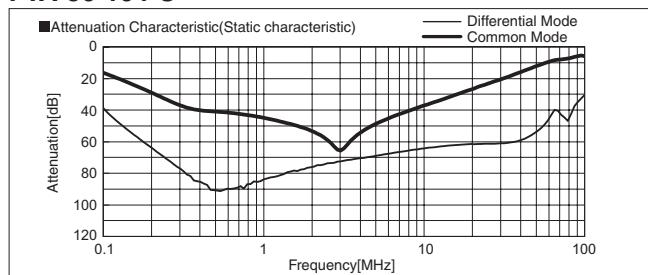
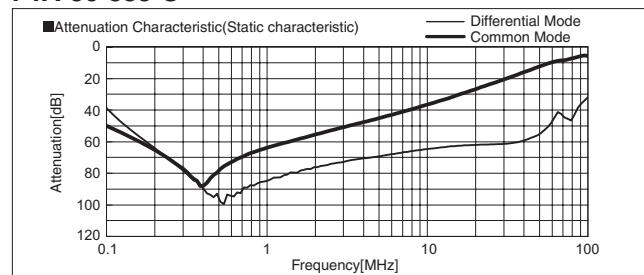
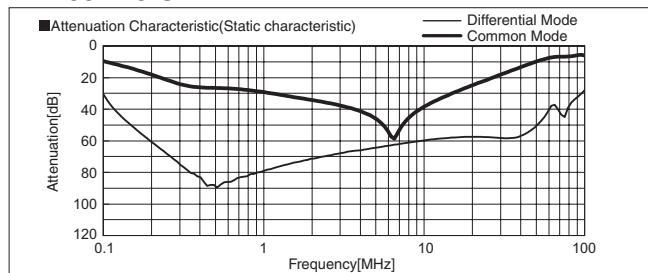
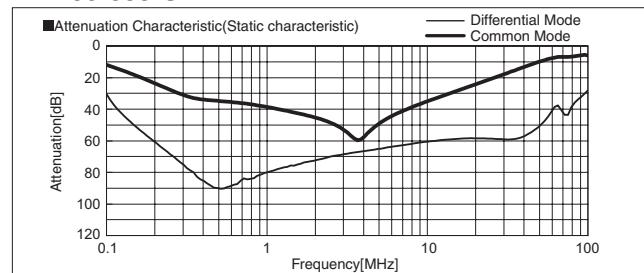
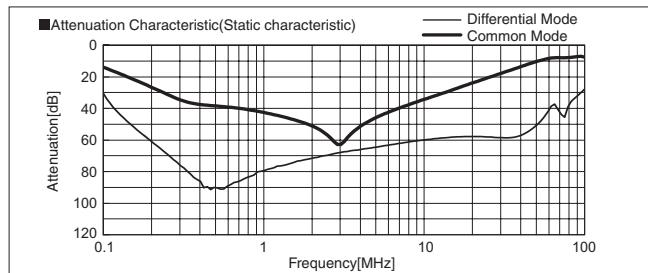
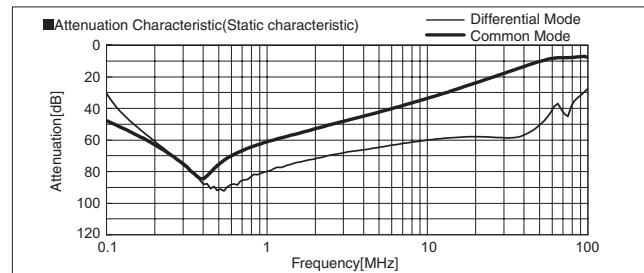
FTA-40-223-H**FTA-40-683-H****FTA-40-104-H****FTA-50-223-H****FTA-50-683-H****FTA-50-104-H****FTA-60-223-H****FTA-60-683-H****FTA-60-104-H**

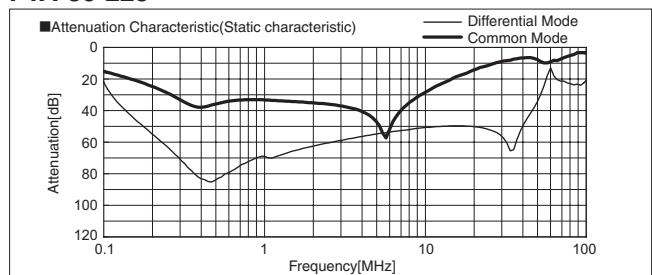
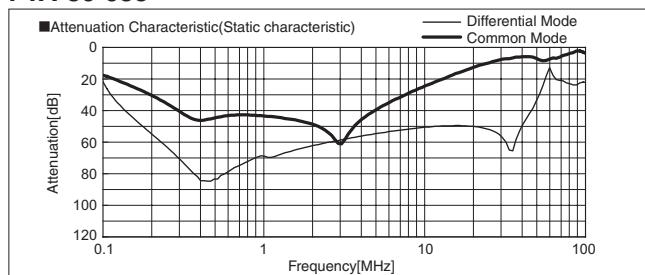
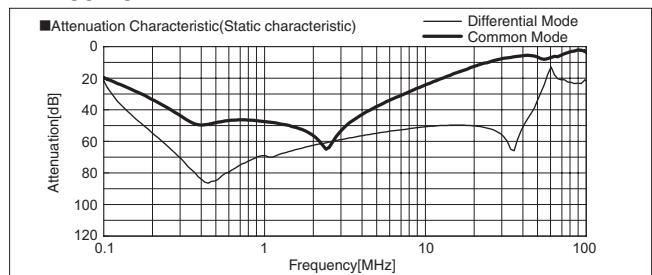
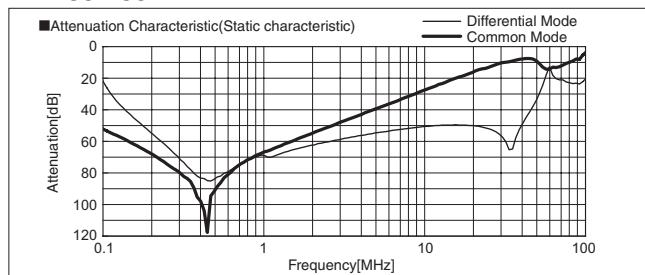
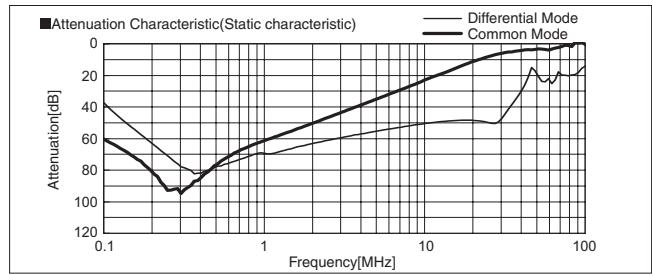
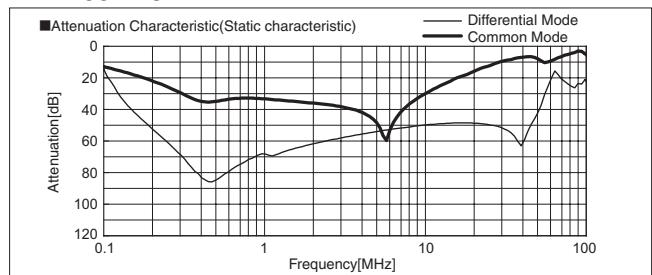
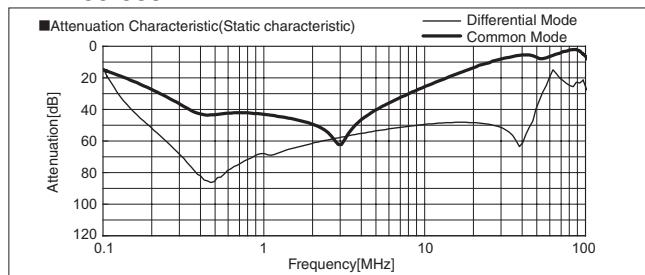
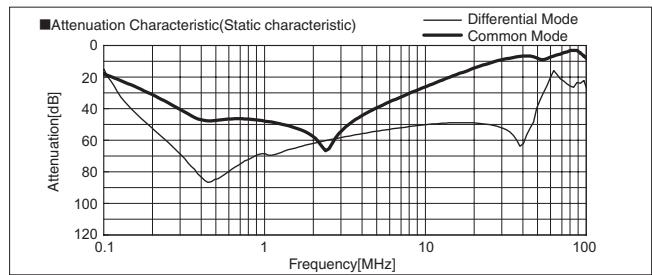
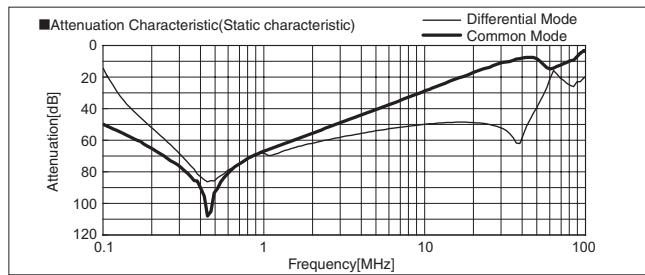
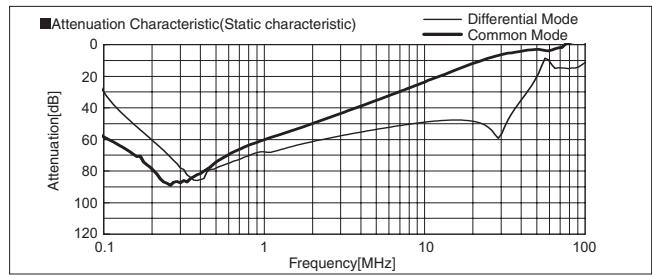
FTA-40-223-U**FTA-40-683-U****FTA-40-104-U****FTA-40-335-U****FTA-50-223-U****FTA-50-683-U****FTA-50-104-U****FTA-50-335-U****FTA-60-223-U****FTA-60-683-U****FTA-60-104-U****FTA-60-335-U**

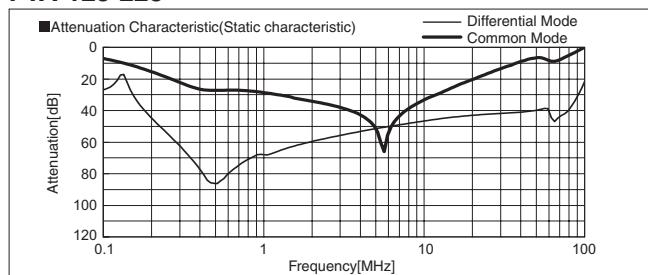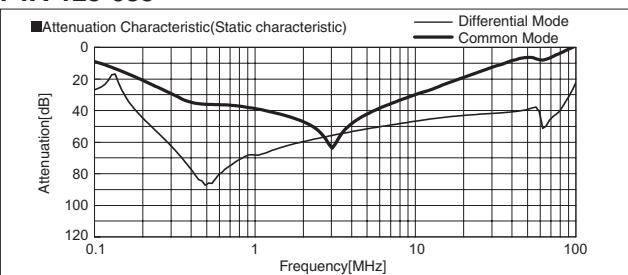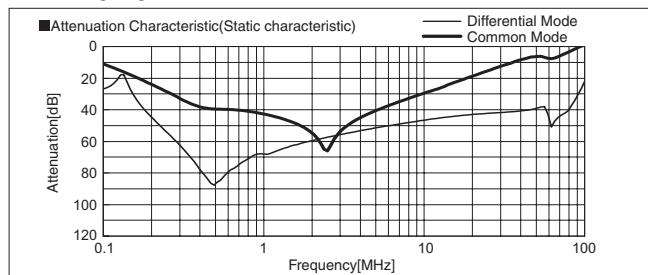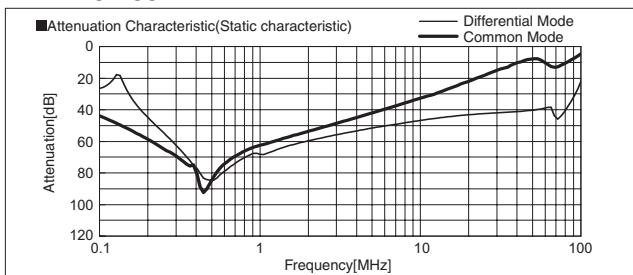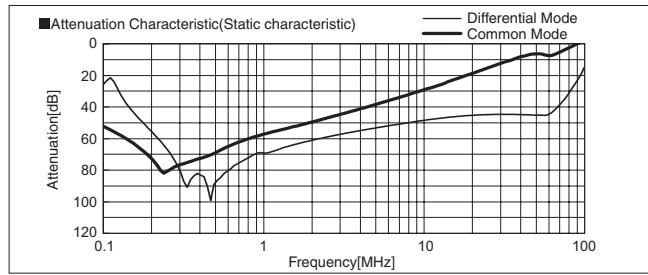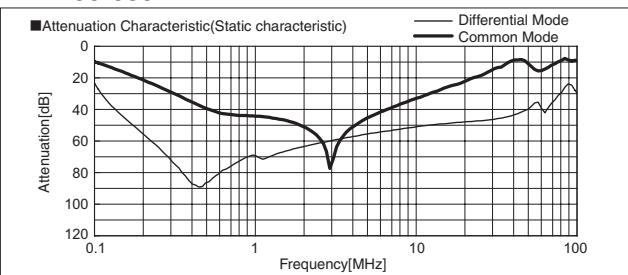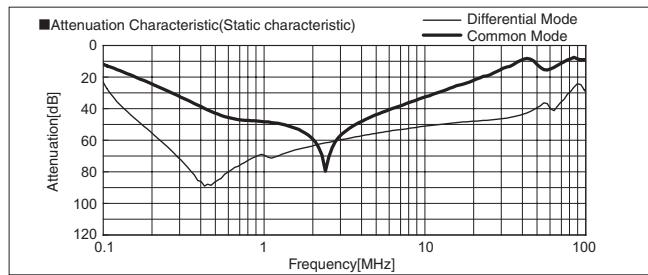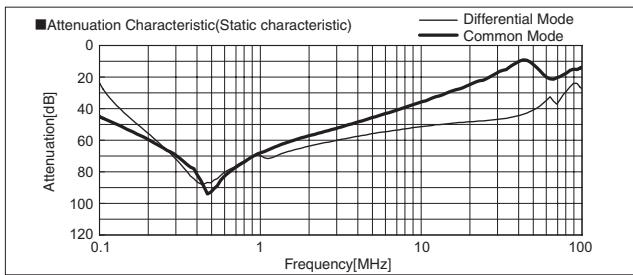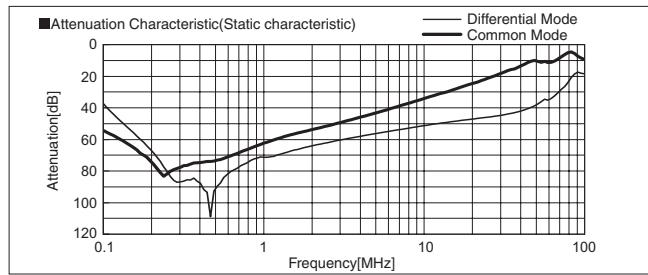FTA-80-223**FTA-80-683****FTA-80-104****FTA-80-155****FTA-80-335****FTA-100-223****FTA-100-683****FTA-100-104****FTA-100-155****FTA-100-335**

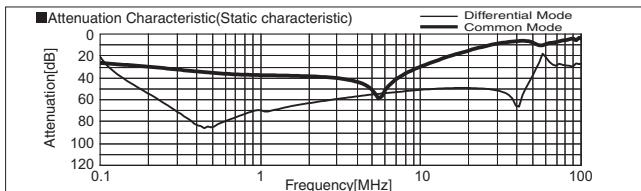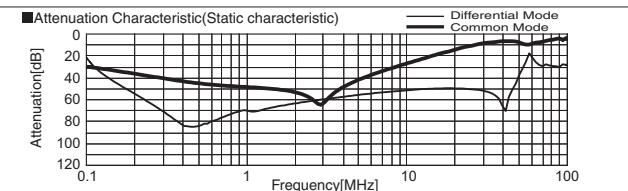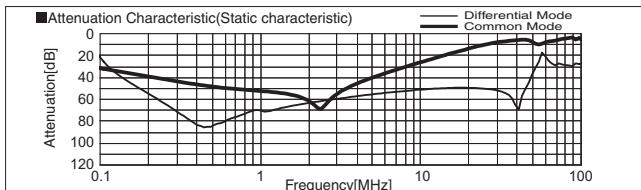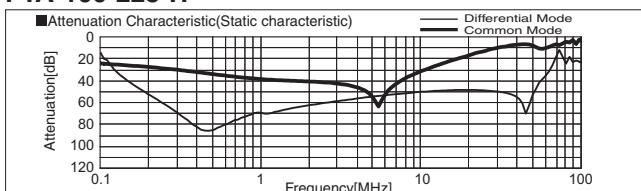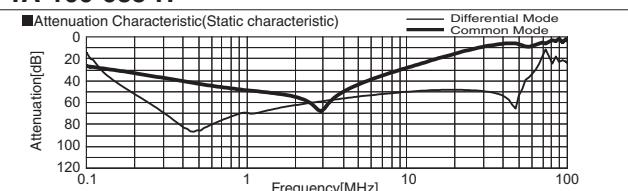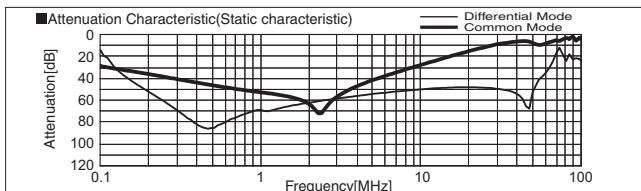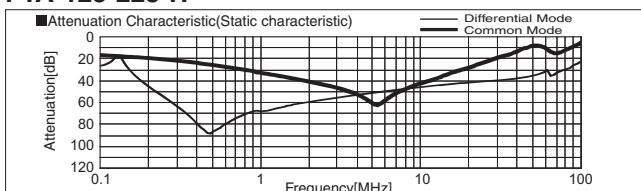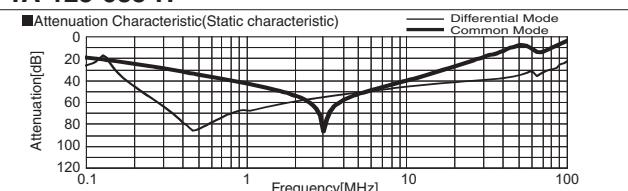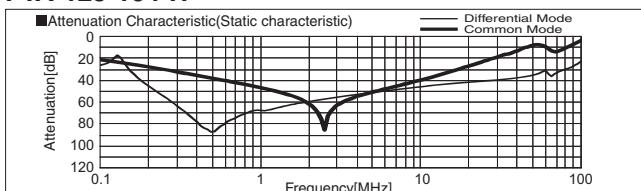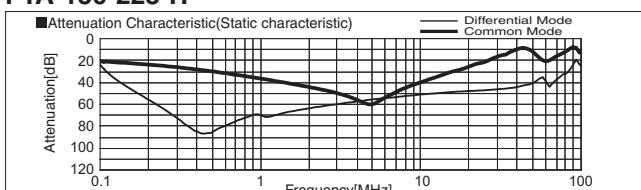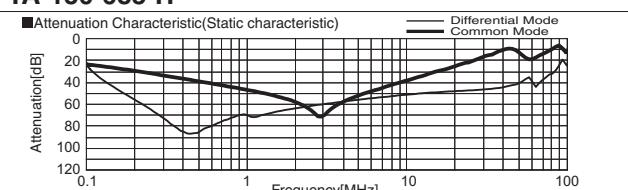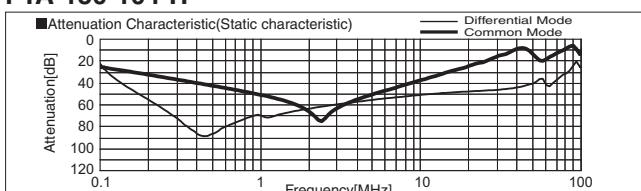FTA-125-223**FTA-125-683****FTA-125-104****FTA-125-155****FTA-125-335****FTA-150-223****FTA-150-104****FTA-150-683****FTA-150-335**

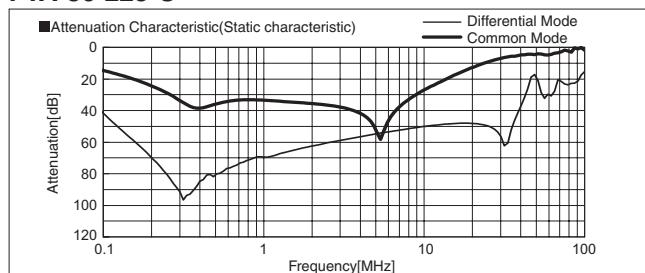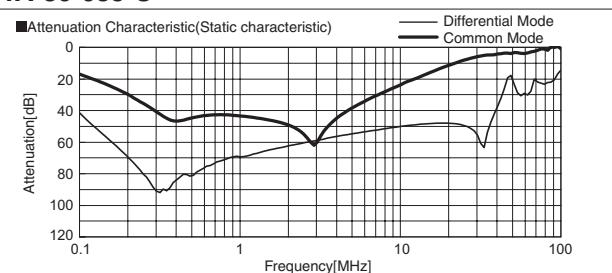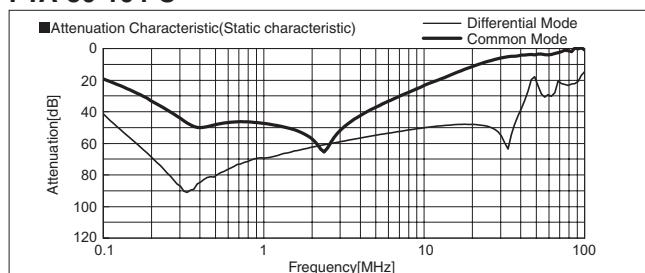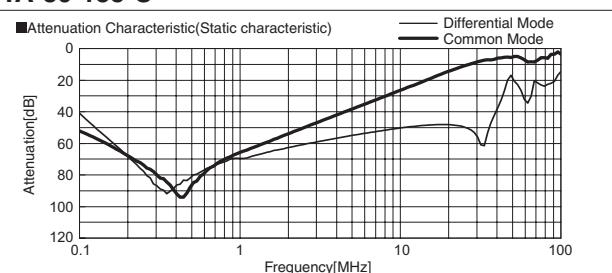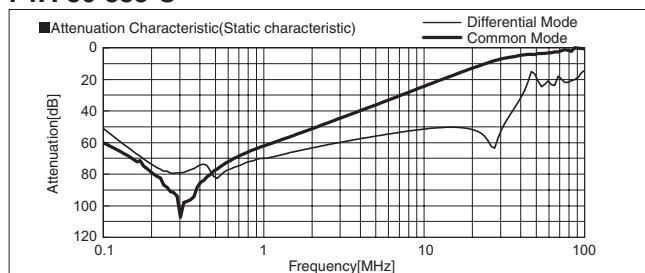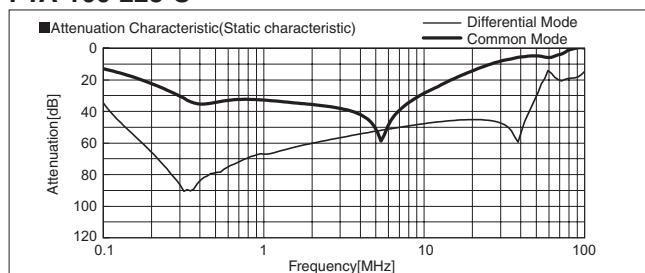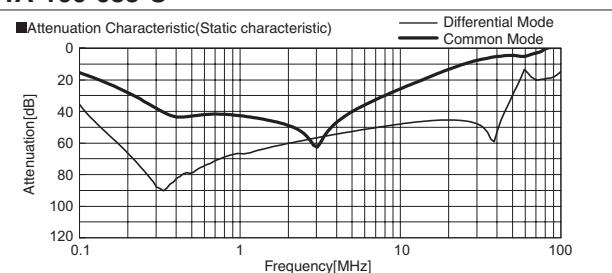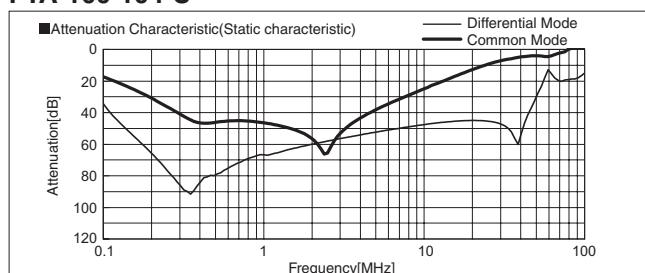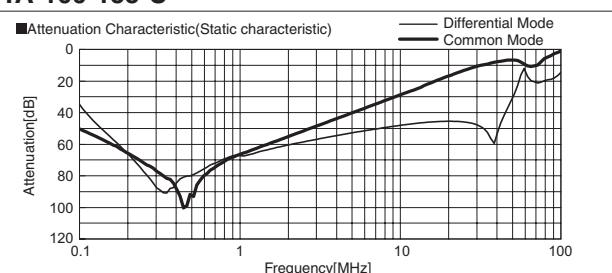
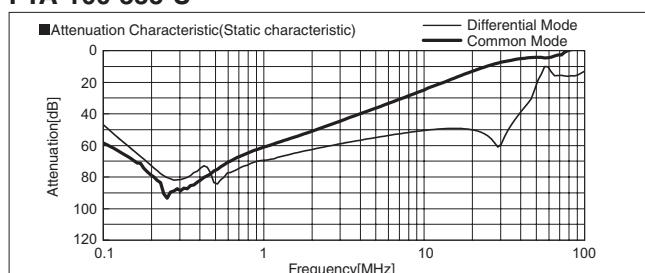
FTA-80-223-H**FTA-80-683-H****FTA-80-104-H****FTA-100-223-H****FTA-100-683-H****FTA-100-104-H****FTA-125-223-H****FTA-125-683-H****FTA-125-104-H****FTA-150-223-H****FTA-150-683-H****FTA-150-104-H**

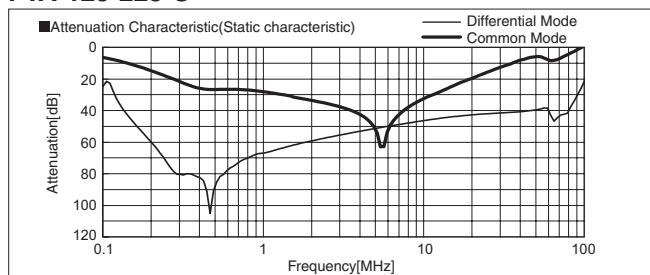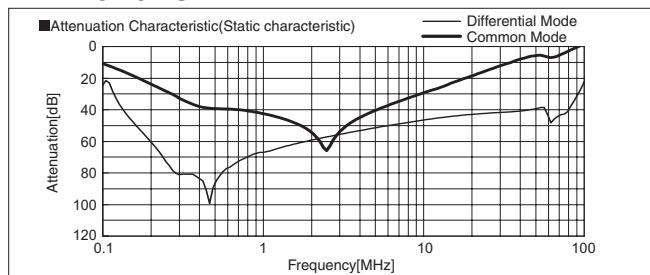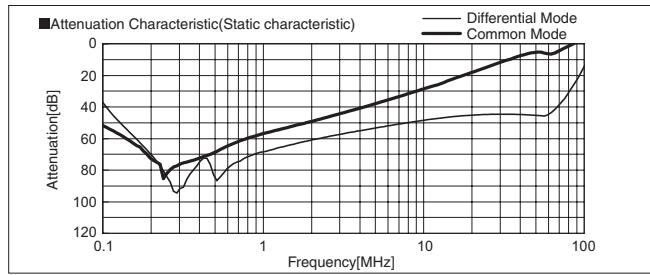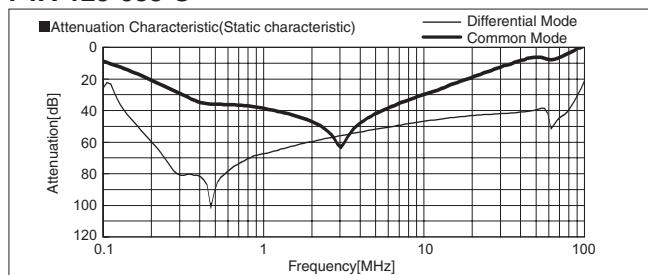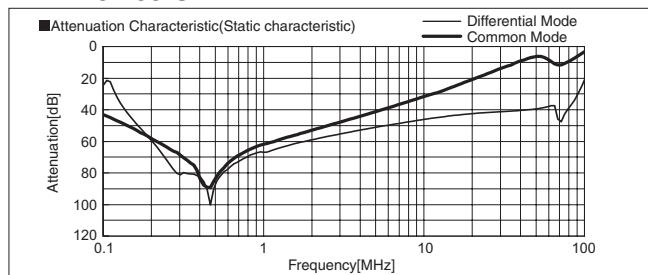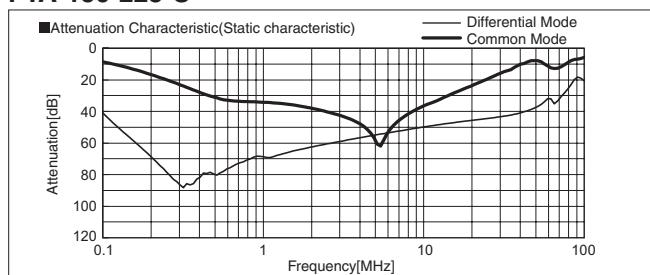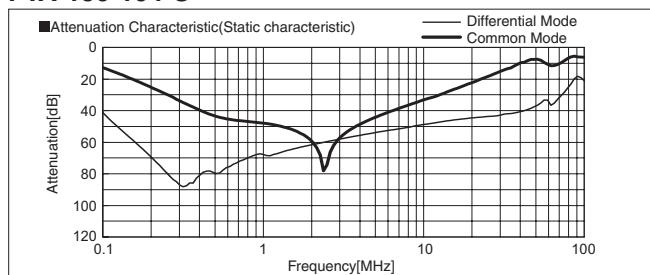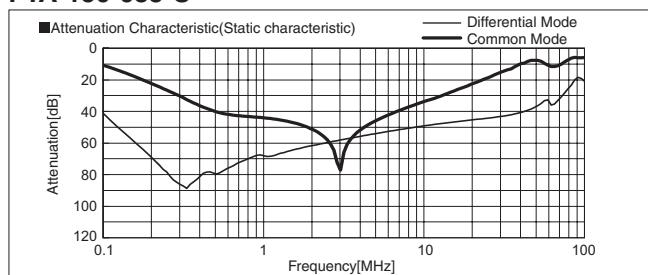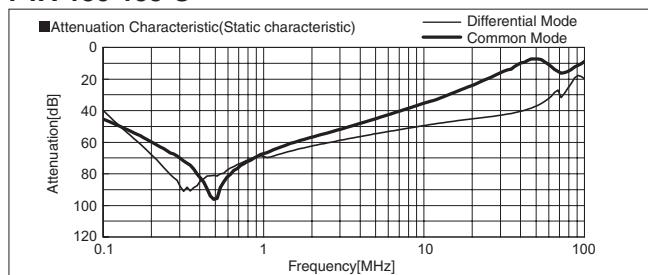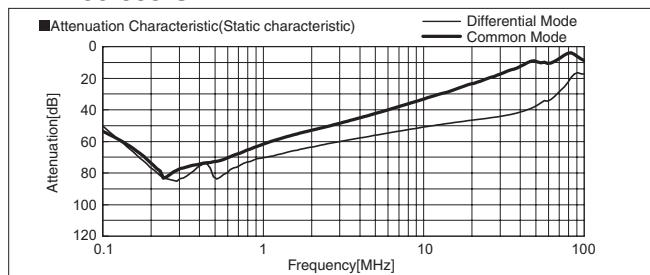FTA-80-223-U**FTA-80-683-U****FTA-80-104-U****FTA-80-155-U****FTA-80-335-U****FTA-100-223-U****FTA-100-683-U****FTA-100-104-U****FTA-100-155-U****FTA-100-335-U**

FTA-125-223-U**FTA-125-104-U****FTA-125-335-U****FTA-125-683-U****FTA-125-155-U****FTA-150-223-U****FTA-150-104-U****FTA-150-683-U****FTA-150-155-U****FTA-150-335-U**


1 Method of connecting EMI/EMC Filter

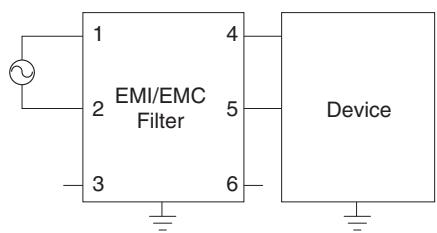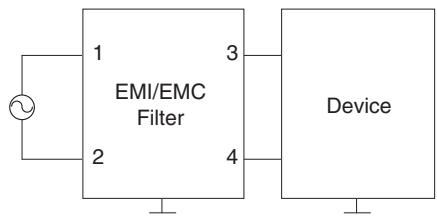(1) Single Phase




※Three phase EMI/EMC filter is also available as a single phase input type.

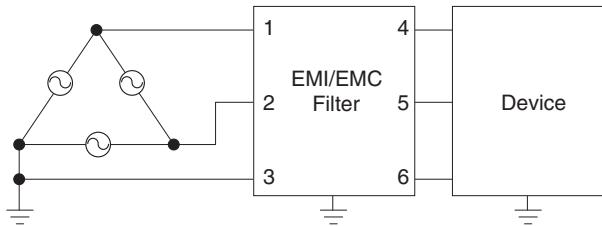(2) Three phase (Delta-connection)



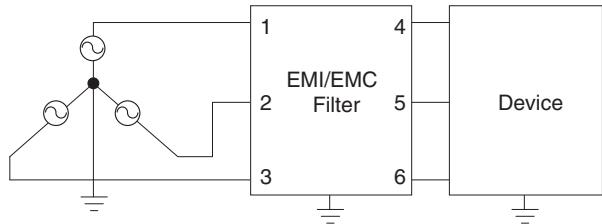(3) Three phase (Star-connection)



[Reference] Example of calculating input current calculation

Input voltage 400 [V]

Input capacity of the equipment 4000 [VA]

$$\text{Input current} = \frac{4000 \text{ [VA]}}{400 \text{ [V]} \times \sqrt{3}} = 5.8 \text{ [A]}$$

2 Caution when connecting EMI/EMC Filter

Please note the excessive temperature increase of EMI/EMC filter.
Please contact us if judgement is difficult.

(1) Input voltage and frequency

Please use within the rated voltage (or maximum voltage) of each model.

Input frequency specification for AC input EMI/EMC filter is considered as commercial frequency (50/60Hz).

It should not be used under the following conditions.

1) Distorted input voltage waveform.

(Triangle wave, square wave etc.)

2) High input frequency (ex: 400Hz)

(2) Input current

Please use within the rated current of each model.

EMI/EMC filters have short term peak current capability. Therefore, it can flow ~40A or ten times of rated current, non-repeated, within a few ms such as inrush current of power supply etc.

However, it should not be used under the following conditions.

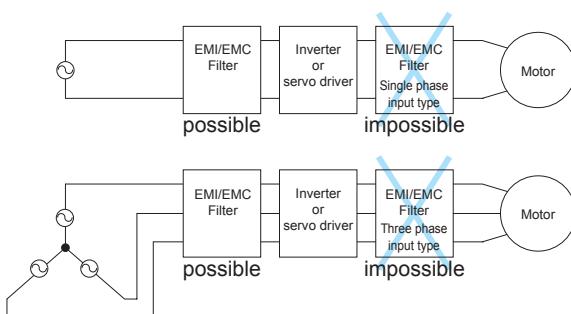
1) Long duration peak current.

2) Peak current or high-frequency current is continuously flowing.

(3) Connection to a general-purpose inverter (servo driver)

Please connect EMI/EMC filter to input side of inverter driver (servo driver).

It should not be used between the inverter (servo driver) and the motor.




3 Safety Considerations


- To apply for safety standard approval using this EMI/EMC Filter, the following conditions must be met.
 - The unit must be used as a component of an end-use equipment.
 - Protection earth terminal (PE) must be connected to safety ground of end-use equipment.

(1) Attenuation Characteristic(Static characteristic)

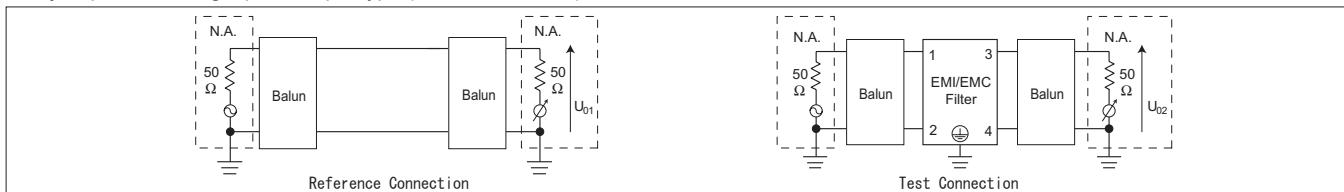
■ Object product : Single phase input type (Differential mode)



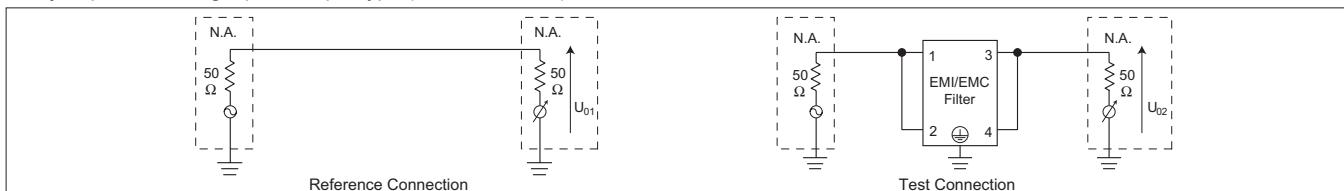
■ Object product : Single phase input type (Common mode)



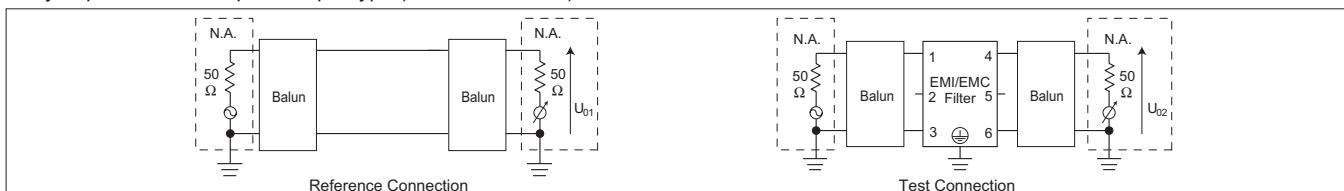
■ Object product : Three phase input type (Differential mode)



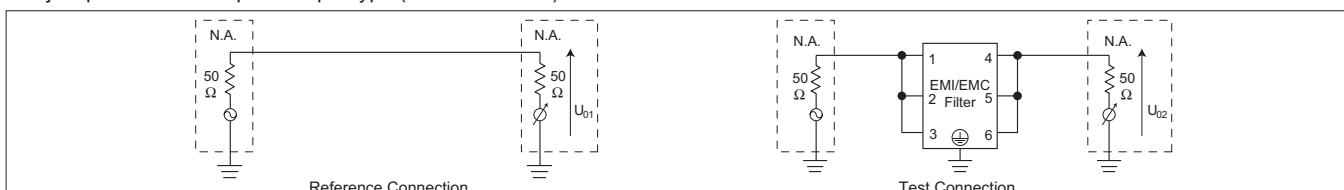
■ Object product : Three phase input type (Common mode)



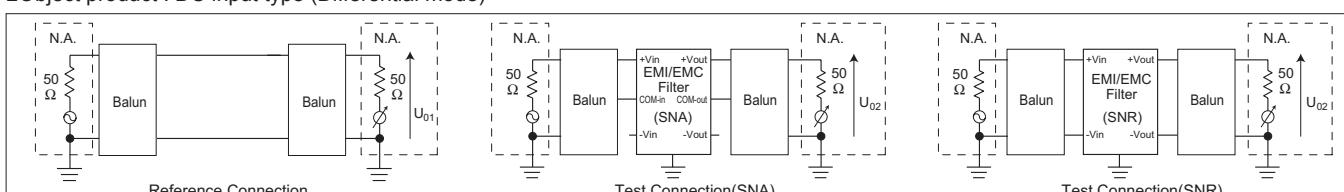
■ Object product : DC input type (Differential mode)



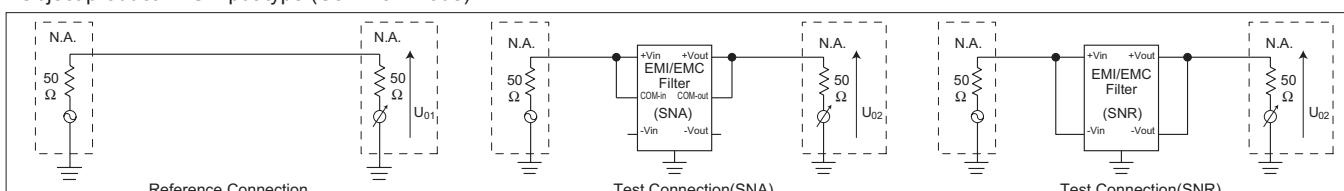■ Object product : DC input type (Common mode)



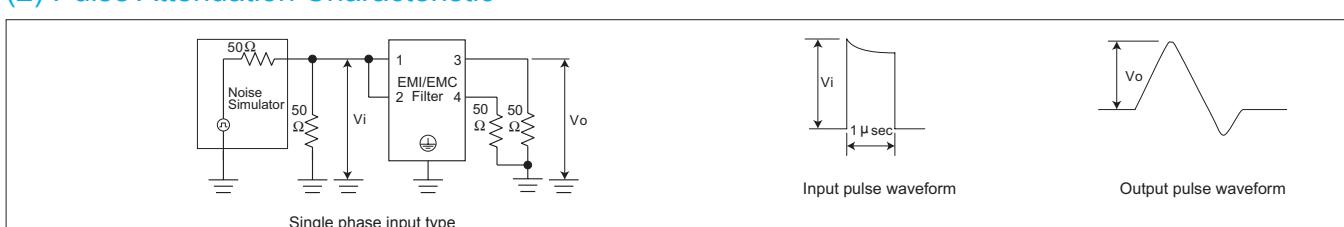(2) Pulse Attenuation Characteristic



※ Attenuation = $20\log(U_o/U_s)$ [dB]
 U_o : Voltage in state without filters
 U_s : Voltage in state which added filters
※ N.A. : Network analyzer